



**TP150** TELEPROMPTER

**User Manual** 

3 Install the tripod head

### Packing List



Portable suitcase

Glass frame



Teleprompter



Tripod head

Dusting cloth






Shade



Product parameters

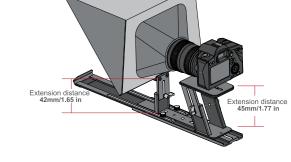

Instruction manual






L-shaped hand screw





# Installation steps diagram

   1 Install the glass frame










 
Camera vertical shooting Notice: The camera mount adapter needs to be adjusted to the top



Camera horizontal shooting Notice: When shooting horizontally, please raise the tripod head to the top

### 5 Install teleprompter (cell phone or tablet)

 Remote control







Tablet vertical teleprompter



Tablet horizontal teleprompter

# APP Download



IOS User Download: Search keywords "Desview" to download



Android User Download: Search keywords "Desview" to download

## Remote Controller



 Maximum extension distance -295mm/11.61 in

NOTICE: Due to the compatibility issue, some of the smartphones' or tablet's functions have some differences.

### Controller Use Instruction

1.power on:Keep press (), until the lights on (about 2 seconds).

2.power off:Keep press off, until the lights off (about 5 seconds).

Notice:if power on without connecting anything,it will power off after 5 minutes;

if the phone connected ,it will power off after 12 minutes without any operation.

3. Pairing Connection: The LED light on the controller will flashes after powered on, the remote controller will automatically enters the wireless paring mode, search the controller name (Bestview) on the prompting device and click connecting, after the connection is successfully, the LED light flashes intermittently.

China Telecom	3.4 K/s ≵ ഀ 🌣 🖏 🔭 🔭 13:41
China Unicom Bluetooth	
Turn on Currently visible to nearby Bluetooth devices	
Device name	a1234 >
Received files	>
PAIRED DEVICES	
■ BESTVIEW	(i)

