

Cautions

Precautions and maintenance

- For indoor use only
- To avoid risk of fire or electric shock, do not expose the unit to moisture or condensation.
- To avoid overheating, do not block the ventilation holes on the back of the Digital Photo Frame.
- Keep the Digital Photo Frame out of direct sunlight.
- Do not dismantle the Digital Photo Frame. There is a risk of electric shock and there are no user-serviceable parts inside. Dismantling the Digital Photo Frame will void your warranty.

Cleaning the LCD Screen

- Treat the screen carefully. Because the screen of the Digital Photo Frame is made of glass and it would easily be broken or scratched.
- If fingerprints or dust accumulate on the LCD screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth to clean the LCD screen.
- Moisten the cleaning cloth with the cleaning solution and apply the cloth to the screen.

WARNING:

Please power off the unit before inserting or removing a card or USB device.

Failure to do so may cause damage to the card/USB and the unit.

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

This device is designed for private use only!

Introduction:

Thank you for your purchase of the Digital Photo Frame. It is designed to allow quick and easy view of photos taken from your digital camera, mobile phone, or from a memory storage card. Please read this User Manual carefully to learn the correct way to use the Digital Photo Frame.

Features:

1. Support picture format: JPEG ,BMP
2. Support audio format: MP3 (8-48 KHz, 8-320 Kbps),
WMA (22-48 KHz, 5-320 Kbps)
3. Support video format: Avi, Mov, MPEG4 (max. 720x576, 30 fps)
M-JPEG (max. 1280x720, 30 fps)
4. Support Memory card: SD/SDHC/ MMC/MS.
5. USB connection: USB 2.0 .
6. Built-in flash memory with about 3Mb storage.
7. Support viewing pictures in thumbnail mode
8. Built-in clock, alarm and calendar with slideshow window.
9. Support Copy files to memory and delete files in the built in memory and cards.
10. Image-display mode: slideshow, preview, zoom, rotate function.
11. Adjustable slideshow speed and above 10 kinds of transition slideshow
12. Adjustable brightness, contrast, saturation
13. Built-in stereo speaker (2x1W) and earphone jack
14. The digital photo frame can stand horizontally or vertically.
15. OSD language: German, English, French, Spanish, Portuguese, Italian, Greek, Turkish, Hungarian, Polish, Russian, Danish, Swedish, Norwegian, Finnish, Dutch

Packaging Check List:

 
- | | |
|----------------------------------|---------|
| 1. 10.1 inch Digital photo frame | 1 piece |
| 2. AC/DC adapter | 1 piece |
| 3. Remote control | 1 piece |
| 4. User manual | 1 piece |
| 5. Warranty card | 1 piece |
| 6. Bracket | 1 piece |

CONTENTS

1. Product Diagram	4
1.1 Remote Control	4
1.2 Rear of Frame	5
1.3 Right Side of Frame	5
2. Installing & Replacing the Battery	5
3. Getting Started	5
4. Operating Instruction	6
4.1. Card and USB	6
5. Picture Mode	7
5.1.Copy & Delete function.....	8
6. Music Mode.....	8
7. Video Mode	9
8. Calendar.....	9
9. File.....	9
10. Setup	10
11. Stand Instruction	11
12. Technical Specifications.....	12
13. Troubleshooting Guide	12


1. Product Diagram

1.1 Remote Control

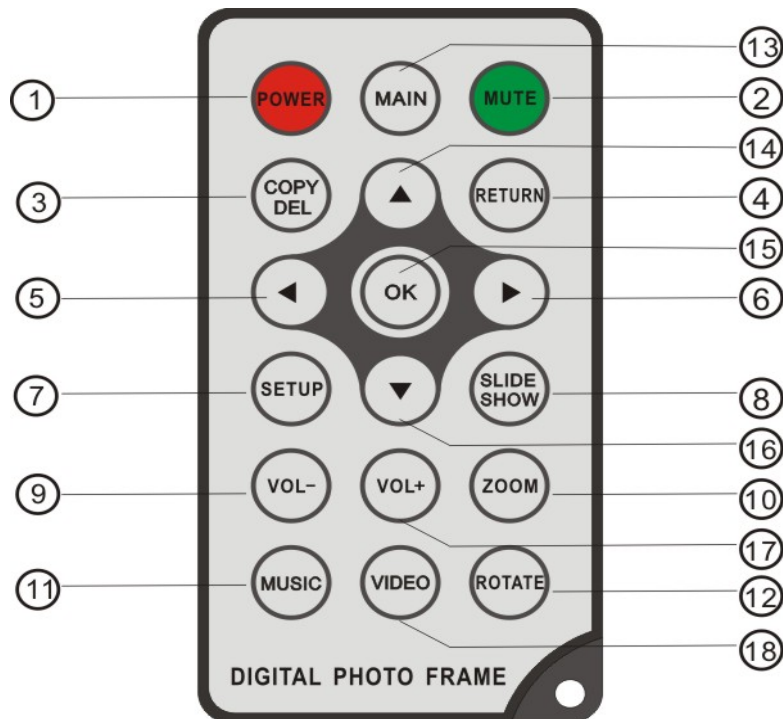


- 1) **POWER** – Switch On/Off.
- 2) **MUTE** – Press Mute button to silence the voice temporarily.
- 3) **COPY&DEL** –Enter copy & delete interface
- 4) **RETURN** – Return to upper page
- 5) **◀** – Functional selection button from right to left cursor
- 6) **▶** – Functional selection button from left to right cursor
- 7) **SETUP** – Go directly to Setup mode
- 8) **SLIDESHOW** –Press to start slideshow directly
- 9) **VOL-** – Turn down the volume
- 10) **ZOOM** – In pause state of single picture mode, press to magnify picture display size
- 11) **MUSIC** – Press to enter music interface
- 12) **ROTATE** –In pause state of single picture mode, press to revolve the picture 90° in clockwise every time
- 13) **MAIN** – Press to enter main menu interface
- 14) **▲** – Functional selection button from the bottom to the top cursor
- 15) **OK** – Press to confirm. Play/pause: In the playing mode, press this button, it will pause; repress this button, it will play again
- 16) **▼** – Functional selection button from the top to the bottom cursor
- 17) **VOL +** – Turn up the volume
- 18) **VIDEO** – Press to enter video interface

 1.2 Rear of Frame

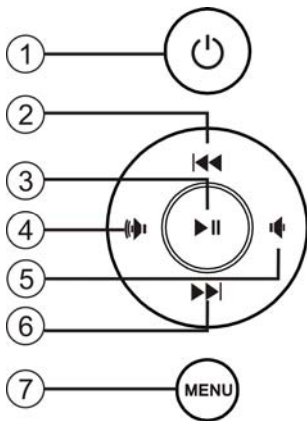

1. Power on/off
2. PREVIOUS/UP
3. Play/Pause/OK
4. Right
5. Left
6. NEXT/DOWN
7. Menu/Exit

 1.3 Right Side of Frame

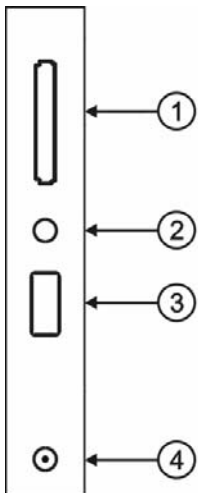

1. SD/SDHC/MMC/MS CARD
2. EARPHONE JACK
3. USB
4. DC IN

2. Installing & Replacing the Battery

If you need a new battery, please refer to the following.

Place the upside of the remote control down, press down on the ridged area of the battery cover and pull towards you to remove the tray. Place one CR2025 lithium button-cell battery on the tray with the positive "+" side facing you. Reinsert the tray.



 
3. Getting Started

- 3.1 Plug one end of the included AC adapter into a standard 110-240V AC electrical outlet and the other end into the DC in of the frame.
- 3.2. Remove the protective film covering the LCD.
- 3.3. Remove the plastic battery insulator from the battery compartment and make sure

the remote control has a battery inside. Please refer to “Installing & Replacing Battery” if you need a new battery.

3.4. Power on the unit by pressing the Power button on the remote control.

4. Operating Instruction

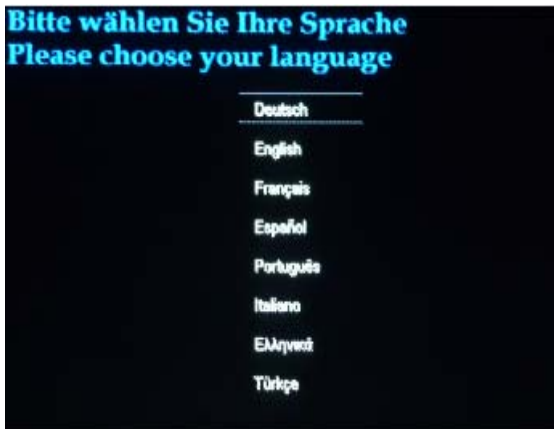

When the frame is switched on for the very first time, a menu for the selection of the default language appears. Please select the desired language and confirm with the "OK"-Button.

To open the "Language-Selection" again, please use the "**Reset Setting**" Function in the Menu "**Set Up**".



After turning on the unit, it will show the startup picture, then slideshow will automatically play pictures from the built-in memory when there is no card insert. If there is a card or USB device, it will slideshow pictures from the card or USB.

4.1. Card and USB



Press **RETURN** 3 times, it will show the card select interface, built in memory, USB and SD/SDHC/MMC/MS card.



It supports SD/SDHC/MMC/MS and USB 2.0. After inserting a card or USB device, slideshow will play automatically, then press **RETURN** twice to access to main menu.

Note: Make sure there are supported files in the Card or USB device.

5. Picture Mode



In main menu, highlight **Photo**, press **OK** to start slideshow. Then press **RETURN** to access to thumbnail mode, use ◀ ▶ to choose the picture you want to display, press **OK** to confirm.

 
 
Note: When picture is in slide show mode, press **OK** to change picture display to Slide show + Music 、 Browse Mode or Photo Slide show



Press **SLIDESHOW** to start slideshow pictures in single window or multi screen mode.

Change slide mode as described: press **SETUP** to choose **Photo Setup**, then choose **Slide Mode**, Select single window/two windows/ Triple windows/ four windows with ◀ ▶ , press **OK** to confirm.

5.1. Copy & Delete function

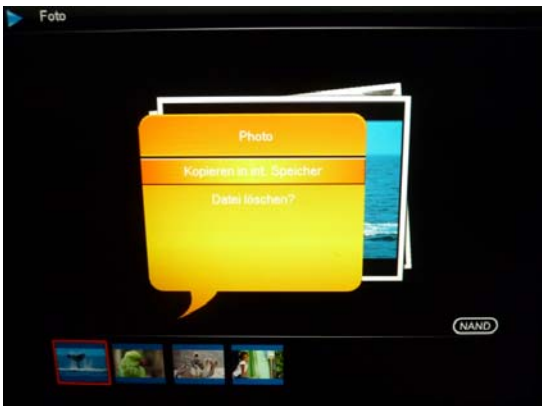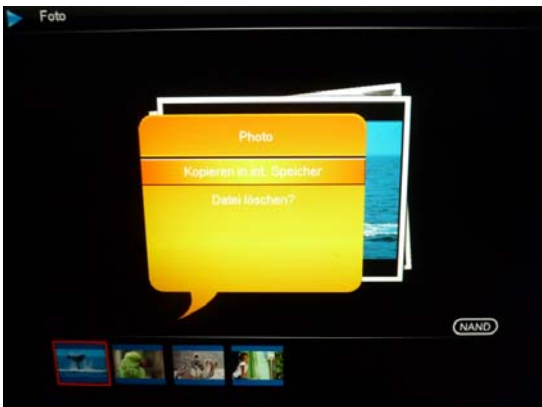

Copy pictures to built-in memory :
in thumbnail mode of Card/USB, use ◀▶ to highlight the picture you want to copy to built-in memory, press **COPY DEL** to enter Copy/Delete interface, use ▲▼ to select **Copy to internal**, press **OK** to confirm.

Please note, the internal memory can only store 3 -5 Pictures, depending on the size of the pictures.

Delete pictures in built-in memory or memory card:

In thumbnail mode of Built-in memory, use ◀▶ to highlight the picture you want to delete, press **COPY DEL** to enter Copy/Delete interface, use ▲▼ to select **Delete files**, press **OK** to confirm.

6. Music Mode



 
Press **RETURN** to choose memory card in the main menu. Highlight **Music**, press **OK** to access the music mode, or press **MUSIC** directly on the remote control, press ▲▼ to select the music from the playlist and press **OK** to confirm. Press **VOL+/-** to turn up/ down the volume.

7. Video Mode



Press **RETURN** to choose memory card in the main menu. Highlight **Video**, press **OK** to access the video mode, or press **VIDEO** directly on the remote control, press **▲ ▼** to select the video from the playlist, then press **OK** to confirm. Press **VOL+/-** to turn up/ down the volume.

8. Calendar

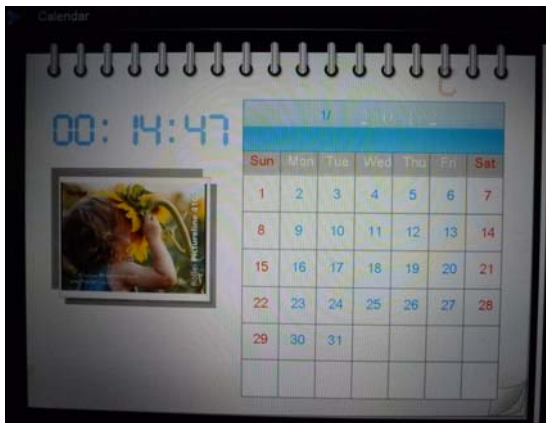


Select **Calendar** from the main menu, press **OK** to enter, the calendar is displayed and any photos on the connected memory are shown as a slideshow to the side. Browse the calendar by using **◀ ▶**.

9. File




Select **File**, then press **OK** to access to file interface. In this mode, you can browse all the picture files and folders in the memory card or the built-in memory.

 Copy/Delete Function

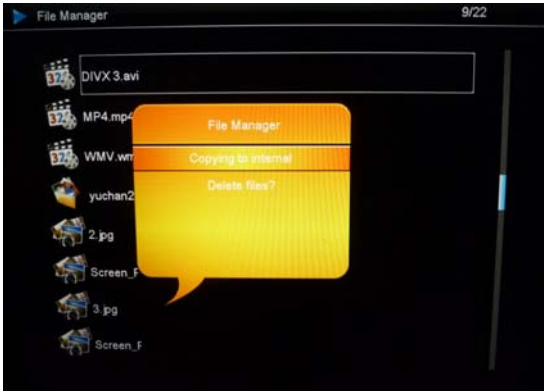

In file interface, use ▲▼ to select the file you want to Copy or Delete, press **COPY DEL** to enter Copy/Delete interface, use ▲▼ to select **Copy to internal** or **Delete files**, press **OK** to confirm.

 10. Setup

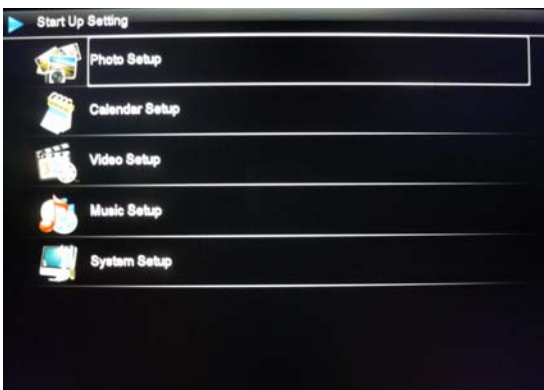

Select **Setup** from main menu, press **OK** to access to Setup interface. Use ▲▼ to select the item you want to set up. Press **OK** to show the sub menu, select items with ◀▶., then press **OK** to confirm.

10.1 Photo Setup

10.1.1 Display Mode: Slide show + Music 、 Browse Mode or Slide show Only

10.1.2 Music: Press ◀▶ to choose on/off

10.1.3 Display Ratio: Optimal, Full, Auto fit

10.1.4 Slideshow Speed: 3/5/15/30seconds, 1/5/15minutes

10.1.5 Slideshow repeat: Circular, Single

10.1.6 Slideshow effect: Random, Snake, Partition, Erase, Blinds, Random lines, Grid, Cross, Spiral, Rect., Close,

10.1.7 Slide Mode: single window, two windows, Triple windows, four windows.

10.1.8 Photo play sequence: Sequence,Random

10.2 Calendar Setup

10.2.1 Date: Press **OK**, then use ▲▼ to select setup items, then use ◀▶ to set Month, Day, Year, press **OK** to confirm

10.2.2 Set Time format: 12/24, Press ◀▶ to set, use **OK** to confirm

10.2.3 Clock Time: Press **OK**, press ▲▼ to select setup items, then use ◀▶ to set Hour, Min, press **OK** to confirm

10.2.4 Alarm Status: press ◀▶ to choose on/off

10.2.5 Alarm Time: Press **OK**, press ▲▼ to select setup items, then use ◀▶ to set

Hour, Min, press **OK** to confirm

10.2.6 Alarm Tone: press ◀▶ to choose Alarm 1 2 or 3

10.2.7 Alarm Frequency: Once, Everyday, Mon. to Fri., Weekend

10.3 Video Setup

10.3.1 Display Mode: Full screen, Original Size

10.3.2 Play Mode: Circular, Single, Random

10.4 Music Setup

10.4.1 Play Mode: Single, Single repeat, Circular, Random

10.5 System Setup

10.5.1 Language: German, English, French, Spanish, Portuguese, Italian, Greek, Turkish, Hungarian, Polish, Russian, Danish, Swedish, Norwegian, Finnish, Dutch

10.5.2 Brightness: Use ◀▶ to select from 01 (lowest) to 16 (highest)

10.5.3 Contrast: Use ◀▶ to select from 01 (lowest) to 16 (highest)

10.5.4 Saturation: Use ◀▶ to select from 01 (lowest) to 16 (highest)

10.5.5 Start up mode: Video, Calendar, Main menu, Photo, Music

10.5.6 Volume: Use ◀▶ to select from 01 (lowest) to 10 (highest)

10.5.7 Reset Setting: Press **OK** to confirm

10.5.8 Version: Check version

10.5.9 System Upgrade: Press **OK** to Start FW upgrade.(Need to use Firmware)\

11. Stand Instruction

Screw the bracket into the slot of the digital photo frame, rotate the bracket until it is locked in place. The digital photo frame can stand horizontally or vertically. Please refer to the illustration shown below.



12. Technical Specifications

- **Adapter:**
Input: AC 100-240V 50/60HZ 350mA
Output: DC 5V/1.5A
- **Picture Format:** JPEG ,BMP
- **Video Format:** MPEG1,MPEG2, MPEG4 (Divx4.0,Divx5.0, Xvid) AVI, M-JPEG and MOV
- Memory card: SD/SDHC/ MMC/MS.
- **USB connection:** USB 2.0 & Mini USB
- **Screen Parameter:**
Screen Size: 10.1 inch TFT
Resolution: 1024X600 Pixels
Aspect Ratio: 16: 9
Contrast: 500:1
Brightness: 200 cd/m²
Response Time: 20ms
Viewing Angle: 60°(left/right/vertical), 40°(horizontal)
Working Temperature: 0°C~40°C, Humidity: 10-85%

13. Troubleshooting Guide

If you have problems with your player, please consult both this guide and manual.If you need further assistance, please contact Technical Support.

- **No power:**
Please check whether the plug is inserted correctly.
- **Remote control no function:**
Please check whether the battery has power (the battery can be used for half a year in normal conditions). Replace with new battery if necessary.
- **Can not read the CARD or USB:**
Please confirm whether there is storage in the card or USB device.
Empty devices cannot be read.
- **Can not play the file:**
Please confirm if the file format is compatible with the player.
- **Display too bright or too dark:**
Please adjust the brightness or contrast in the setup menu.
- **The color is light or no color:**
Please adjust the color and contrast setup.
- **No sound:**
Please check whether the volume is correct and the player is not in Mute mode.