

- ▶ Easy handling
- ▶ Easy-to-read LCD with backlight
- ▶ Timer remote control for: starting time (start of shooting), exposure time, interval timer up to 100 hours in advance
- ▶ Adjustable exposure time between 1 second up to 100 hours
- ▶ Manually controlled exposure with time indication on the LCD
- ▶ Exposure control with additional sound signal
- ▶ Continuous shooting: 1 up to 399 photos
- ▶ Time interval recording with endless shots
- ▶ Incl. batteries



## Technical Features

- ▶ Length of connection cable: 120 cm
- ▶ Dimensions: approx. 155 x 40 x 18 mm
- ▶ Weight: approx. 80 g (without batteries)

## Compatible Camera Models

### Sony

RX100II, RX100III, A100, A200, A300, A350, A700, A900, A3000, A5000, A5100, A6000, A6100, A6400, A6300, A6500, A6600, HX50, HX60, HX300, HX400, A58, A65, A99, A77, NEX-3N, A7, A7C, A7R, A7S, A6300, A7R II, A7R III, A7S II, A7S III, A7 II, A7 III, A7 RIV, A9, A9 II, A68, A77 II, A99 II

## Scope of Delivery

Rollei Cable Release, adapter cable, AAA batteries, user manual

Subject to technical changes.