

- ▶ Easy handling
- ▶ Easy-to-read LCD with backlight
- ▶ Timer remote control for: starting time (start of shooting), exposure time, interval timer up to 100 hours in advance
- ▶ Adjustable exposure time between 1 second up to 100 hours
- ▶ Manually controlled exposure with time indication on the LCD
- ▶ Exposure control with additional sound signal
- ▶ Continuous shooting: 1 up to 399 photos
- ▶ Time interval recording with endless shots
- ▶ Incl. batteries



Technical Features

- ▶ Length of connection cable: 120 cm
- ▶ Dimensions: approx. 155 x 40 x 18 mm
- ▶ Weight: approx. 80 g (without batteries)

Compatible Camera Models

Nikon

D1, D1H, D1X, D2, D2H, D2HS, D2X, D3, D3S, D3X, D4, D4S, D5, D6, D90, D100, D200, D300, D300S, D500, D600, D610, D700, D750, D780, D800, D800E, D810, D850, D3100, D3200, D3300, D3500, D5000, D5100, D5200, D5300, D5500, D5600, D7000, D7100, D7200, D7500, DF, P7700, P7800, V1, Coolpix A, Z5, Z6, Z7, Z6 II, Z7 II

Scope of Delivery

- ▶ Rollei Cable Release, adapter cable, AAA batteries, user manual

Subject to technical changes.

