

Rollei
since 1920

QUICK START GUIDE

FOR GERMAN | ENGLISH | SPANISH | ITALIAN | FRENCH | PORTUGUESE | GREEK | DUTCH
POLISH | RUSSIAN | HUNGARIAN | TURKISH | NORWEGIAN | DANISH | FINNISH | SWEDISH



Powerflex 700 Full HD



gefällt mir – auf
facebook.com/rollei

 


I like – on
facebook.com/rollei




Quick Start Guide

ENGLISH

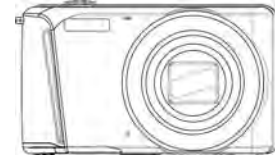

Camera Views

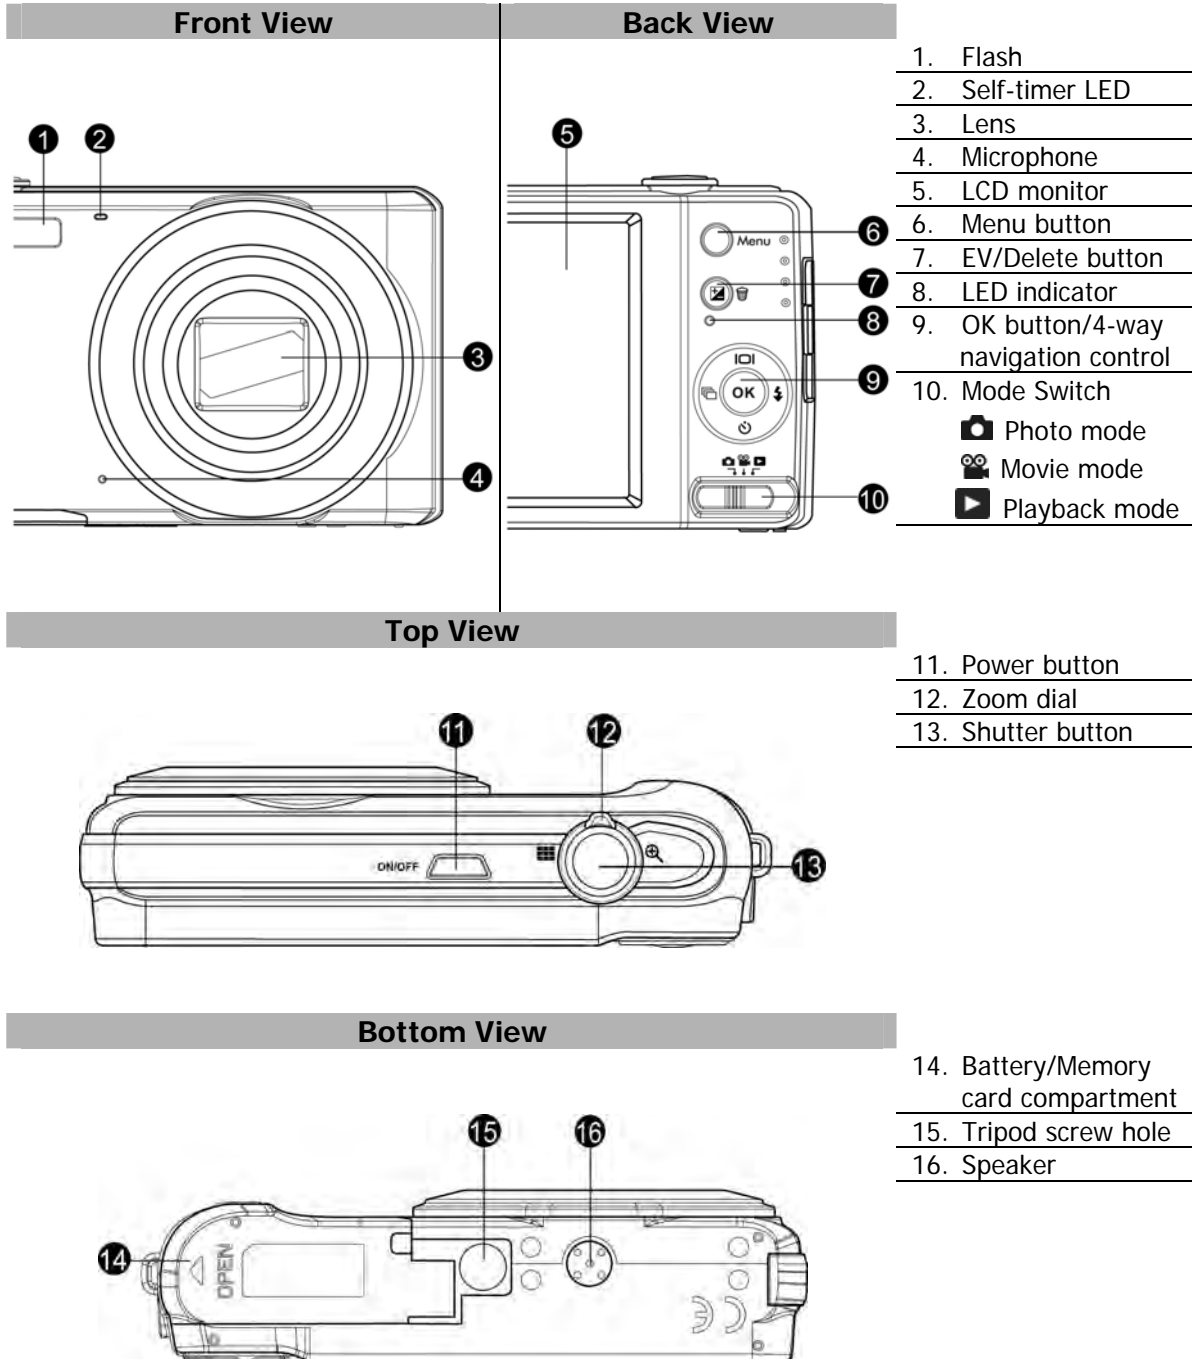 


Left / Right View

- 17. Strap ring
- 18. USB/TV/HDMI Out



Step 1. Inserting the Battery

 1. Unlock and open the battery/memory card compartment at the bottom of the camera.

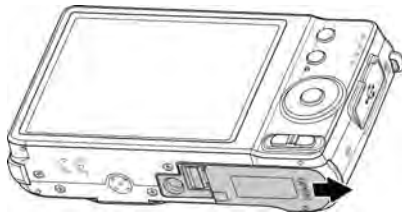

2. Insert the battery into the compartment with the terminal facing inside the camera.
3. Close and lock the battery/memory card compartment



Step 2. Inserting an SD/SDHC/SDXC Memory Card

 
1. Unlock and open the Battery/memory card compartment at the bottom of the camera.
2. Insert the SD/SDHC/SDXC card into the memory card slot with the metallic part facing the back side of the camera.
3. Push the SD/SDHC/SDXC card into the memory slot until it clicks into place.
4. Close and lock the Battery/memory card compartment




NOTE: To remove the SD/SDHC/SDXC card: Gently push the card until it pops out. Pull the card out and lock the battery cover.

Step 3. Setting the Language/Date/Time

1. Turn on the power by pressing **Power button**.
2. Use **4-way navigation control** to move and change the settings.
3. Press **OK button** to finish.

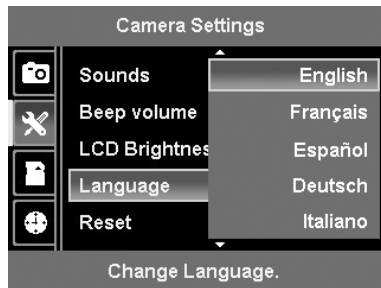


Step 4. Taking Images

1. Slide the mode switch to Photo Mode .
2. Compose your image in the LCD monitor.
3. Spin the **Zoom dial** to adjust view angle.
4. Pressing **Shutter button** down halfway automatically focuses and adjusts the exposure, and pressing the **Shutter button** down fully captures the images.






Step 5. Recording Videos

1. Slide the **Mode switch** to Movie mode .
2. Press the **Shutter button** to start recording.
3. Spin the **Zoom dial** to zoom in and zoom out an image.
4. To stop recording, press the **Shutter button** again.




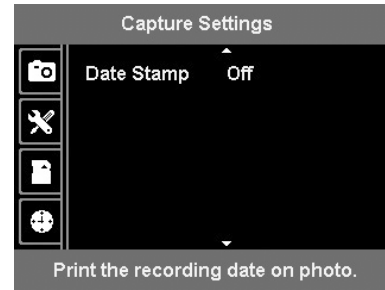 
Step 6. Viewing images, videos

1. Slide the **Mode switch** to Playback mode .
2. The LCD screen displays an image. Use the  or  keys to view previous/next image or video.
3. Press the **OK button** to play a video clip.



Step 7. Using the Tool Menu

1. Press **Menu button**  **Menu** to launch the Record/Movie/Playback Menu.
2. Use the ▼ or ▲ keys to switch the menu option to **Tool** menu.
3. Press OK and use the ▼ or ▲ keys to move through the menu selections.
4. To select an item, press the **OK** button or ► key.
5. Change the submenu settings using the 4-way navigation control.
6. Press the **OK** button to save and apply settings.



Rollei
since 1920

RCP-Technik GmbH & Co. KG
Tarpen 40/Gebäude 7b
D-22419 Hamburg
Hotline +49 (0)6 31/3 42 84 49
welcome@rcp-technik.com
www.rollei.com

Subject to technical changes!

