

www.rollei.com/social



Radio transmitter for Rollei Studio Flash

- ▶ Easily attached to the camera via the hot shoe
- ▶ Using of up to 16 channels and 3 groups
- ▶ Setting of different modes: TTL, manual, High Speed Sync, Freeze Mode
- ▶ Radio transmitter with 2.4 GHz
- ▶ Controlling with Rollei App via Bluetooth®¹⁾
- ▶ Available for Canon, Nikon, Sony or Fuji*



Functions of the app

- ▶ Available for iOS and Android
- ▶ Changing of mode settings such as (TTL/manual), HSS, Freeze etc.)
- ▶ Creating up to 15 set ups



Technical Data	
System mode	2.4 GHz wireless transmitter
Radio distance	2.4 GHz: 300 meters Bluetooth: 10 meters
Channels	16
Groups	3
Flash modes	TTL, manual
Sync modes	Front and rear curtain, High Speed Sync, Freeze
Connection	Hot Shoe
Power supply	2x AAA batteries (1.5 V / not included)
Size	92 x 60 x 40 mm
Weight	68 g
Scope of delivery	1 radio transmitter, user manual

Subject to technical changes. 1) The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Rollei is under license. Other trademarks and trade names are those of their respective owners. *Fuji, Sony, Canon and Nikon are registered trademarks, Fuji, Sony, Canon and Nikon products are trademarks or registered trademarks of Fuji, Sony, Canon and Nikon.

