

Wireless Remote Release

Optional for Canon, Nikon or Sony

Wireless remote control for your DSLM and DSLR camera

- Ergonomically shaped and easy handling for simple use
- ▶ Easily readable OLED display with illuminating
- Easy shooting or start the interval from up to 50 m
- Up to two programs adjustable for fast usage
- Adjustable interval shooting with infinite number of shots
- ▶ Continuous shooting: 1 ∞ shots
- Programming of start time, exposure duration and the interval distance up to 100 hours in advance
- ▶ Exposure time between one second and 99 hours, 59 minutes and 59 seconds
- Manual long exposure with displayed time
- ▶ Exposure control additionally with signal tone



Optional connection cables included, camera-specific

Canon: C1 + C2 Nikon: N1 + N2 Sony: S1 + S2

Technical data	
Modes	Single shooting, continuous shooting, long exposure, programmed interval shooting
Settings	Delay, exposure, interval, frames, program, sound, brightness, reset
Display	0.96 inch OLED display
Radio Frequency	2.4 GHz
Antenna	Built-in
Transmission	Up to 50 m (in open areas)
Radio frequency	2450 MHz
Transmission power	7 dBm
Power Supply	Transmitter: 2x AAA batteries / 2.4 V – 3.2 V / included
	Receiver: 2x AAA batteries / 2.4 V – 3.2 V / included
Standby time	Battery up to 1 year
Shutter Port	2.5 mm
Dimensions	Transmitter: 41 x 122 x 27 mm Receiver: 35 x 31 x 96 mm
Gewicht	Transmitter: 61 g (without batteries); Receiver: 33 g (without batteries)
Operating Temperature	-15°C – 65°C
Storage Temperature	-30°C – 85°C
Box content	Transmitter, receiver, 4x AAA batteries, 1.25 m extension cable, camera- specific connection cables (see table above), hand strap, tripod mount and manual

Designs and specifications are subject to change and require no notice.





