

Rollei

Rollei



[www.facebook.com/
rollei.actioncam.de \(.en\)](http://www.facebook.com/rollei.actioncam.de)



[www.youtube.com/
rolleibullet](http://www.youtube.com/rolleibullet)



[www.twitter.com/
RolleiGermany](http://www.twitter.com/RolleiGermany)



[www.pinterest.com/
rollei1920/](http://www.pinterest.com/rollei1920/)



[http://instagram.com/
rollei1920](http://instagram.com/rollei1920)

Service:

Rollei Service Germany
Denisstraße 28a
D-67663 Kaiserslautern
Service Hotline
+49 (0)6 31/3 42 84 49

Distribution:

Rollei GmbH & Co. KG
Tarpfen 40/Gebäude 7b
D-22419 Hamburg

www.rollei.com



Actioncam 300



USER GUIDE


DEUTSCH | ENGLISH

  THE BASICS

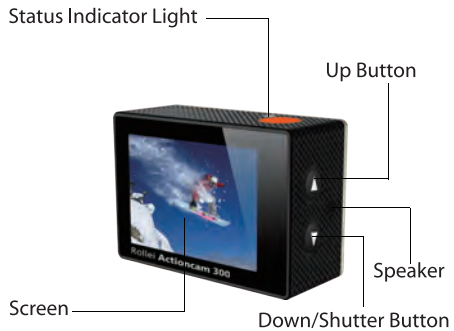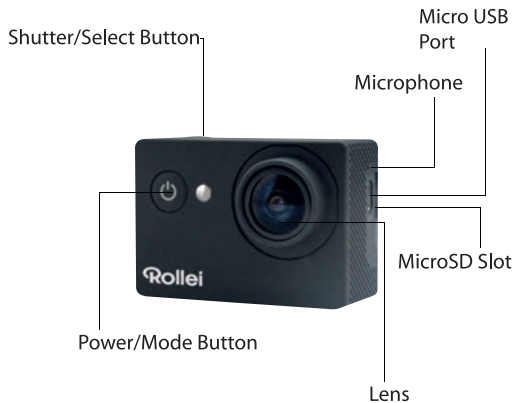



WATERPROOF HOUSING

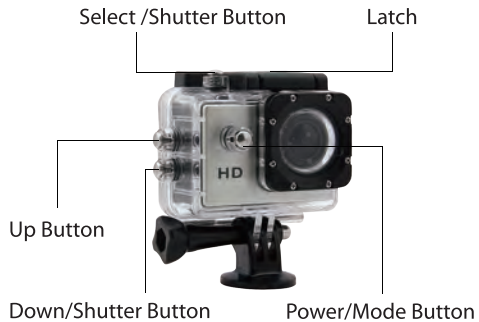 

ZUBEHÖR

			
Waterproof Housing	Clip 1	Mount Basic with 2 component screw	Protective Backdoor
			
USB Cable	Battery	Manual	Safety Pad Flat with 3M sticker
			
Safety Pad Curved with 3M sticker	Adaptor	Adaptor	

ROLLEI ACTION CAMERA 300

Before using the Rollei Actioncam 300, please ensure you read and understand the safety precautions.

- Do not attempt to open the case of the camera or modify it in any way. If the camera has been opened, the warranty will be void. Maintenance and repairs can only be performed by Rollei.
 - Keep the camera away from water and other liquids (unless used in the waterproof case). Do not handle the Rollei Actioncam 300 with wet hands (unless used in the waterproof case). This may cause the camera to malfunction.
 - Recharge the battery using the micro USB Connector.
- Any variation to voltage or current will cause the camera to fail.
- The Rollei Actioncam 300 should not be used in heat exceeding **60 °C (140 °F)**, or cold below **-15 °C (5 °F)**.
 - DO NOT drop the Rollei Actioncam 300.

- Avoid placing heavy objects on the Rollei Actioncam 300.
- Do not dispose of this unit in domestic waste.

GETTING STARTED

 
Turn **camera ON** and repeatedly press the **Power/Mode Button** to cycle through camera modes.

RECORD VIDEO



720p 30fps/VGA 30fps

PLAYBACK



View your videos and photos on the screen



Press and hold “up” button for 5s to delete the photo / video

SETTINGS



Video, Photo, and System Settings

Repeatedly press the **Shutter/Select Button** to cycle through three settings. Use the **Up** or **Down Button** to cycle through the Settings options and press **Shutter/Select** to select desired option.

VIDEO SETTINGS



- 1) **Snow mode:** On/Off
- 2) **Movie Size:** 720p 30fps / VGA(640*480) 30fps

MicroSD Card	720p 30fps	VGA 30fps
32 GB	320 mins	480 mins
16 GB	160 mins	240 mins
8 GB	80 mins	120 mins
4 GB	40 mins	60 mins

- 3) **Date Stamp:** Off/Date & Time
- 4) **Looping Video:** Off/On
- 5) **Exposure:** +-2.0/+-1.7/+-1.3/+-1.0/+-0.7/
+-0.3/0

PHOTO SETTINGS



- 1) **Resolution:** 1M/2M/3M/5M
- 2) **Single Shot:** On/Off
- 3) **Treble Photo:** On/Off
- 4) **Selftimer :** Off/2s/10s
- 5) **Continuous Lapse:** 2,3,5,10,20,30 or 60 second intervals

SYSTEM SETTINGS



- 1) **Sounds:** On/Off, Start-up 1/2/3/None, Beep On/Off, Volume 0/1/2/3
- 2) **Power Frequency:** 50Hz/60Hz
- 3) **Power Save:** Off/1 min/3 mins/5 mins
- 4) **Panel Protect** (Screen Saver): Off/1 min/3 mins/5 mins
- 5) **Date & Time:** YYYY/MM/DD, DD/MM/YYYY, MM/DD/YYYY
- 6) **Language:** German/English/French/Italian/
Spanish/Portuguese/Dutch and Swedish
- 7) **Format:** No/Yes
- 8) **Reset All:** No/Yes
- 9) **Version**

CAPTURING VIDEO + PHOTOS

Press the **Shutter/Select Button** to start/stop recording. Press the **Down/Shutter Button** to take a picture. You can also change **video** and **photo** settings in the Settings menu.

STORAGE/MICROSD CARDS

This camera is compatible with **4GB, 16GB**, and **32GB** capacity **microSD, microSDHC**, and **microSDXC** memory cards. You must use a **microSD** card with a **Class 10** speed rating. We recommend using brand name memory cards for maximum reliability in high-vibration activities.

CHARGING THE BATTERY

If recording is occurring when battery reaches 0%, the camera will save the file and power OFF.

To charge the battery:

1. Connect the camera to a computer or USB power supply.
2. The Charging Status Light remains ON while the battery is charging.
3. The Charging Status Light will turn OFF when the battery is fully charged.

* Charging Time: 4 hours

The EC Declaration of Conformity can be requested from the address specified on the Warranty card.

Conformity

The Manufacturer hereby declares that the CE marking was applied to the Rollei Action Cam 300 in accordance with the basic requirements and other relevant provisions of the following CE Directives:

2011/65/EC RoHs Directive

2004/108/EC Low Voltage Directive

1999/5/EG R&TTE Directive

2006/95/EEC LVD Directive

2009/125/EG EuP Directive

2002/96/EG WEEE Directive



The EC Declaration of Conformity can be requested from the address specified on the Warranty card.

License Statement

The software used in this product is licensed subject to a license pursuant to the GNU – General Public License conditions. We expressly draw attention to the fact that under the GNU – General Public License conditions no liability is accepted.

The starting point for the software is the software published online at

<http://sg-gpl.net/>

The software listed there is licensed pursuant to the GNU – General Public License conditions.

Device-related changes have been made to this software for the product in question. The source text of the software implemented in the product in question can be obtained in response to an enquiry sent to the e-mail address

info@rollei.com

In this instance your e-mail must contain details of what the relevant product is, the relevant serial number and documentary evidence of your commercial source of supply as well as documentary evidence of the date on which the product was purchased from the trade source of supply. We guarantee supply of the source text of the implemented software for a period of at least three years from date of purchase from the trade source of supply where the trade source of supply has sourced the product from us directly or via strictly trade-only dealers.

Zu dieser Software wurden für das vorliegende Produkt gerätespezifische Anpassungen vorgenommen. Den Quelltext der in dem vorliegenden Produkt implementierten Software erhalten Sie auf eine an die Mail-Adresse

info@rollei.com

gerichtete Anfrage zugesandt. In diesem Fall muss Ihre E-Mail Angaben enthalten, um welches Produkt es sich handelt unter weiterer Angabe der Seriennummer, einen Nachweis über Ihre gewerbliche Bezugsquelle und einen Nachweis für das Kaufdatum des Produktes von der gewerblichen Bezugsquelle. Wir garantieren die Zusendung des Quelltextes der implementierten Software für einen Zeitraum von mindestens drei Jahren ab dem Kaufdatum bei der gewerblichen Bezugsquelle, soweit die gewerbliche Bezugsquelle das Produkt direkt von uns bezogen hat oder unter Zwischenschaltung ausschließlich gewerblicher Zwischenhändler.