

Rollei

For Europe

Distribution Rollei GmbH & Co. KG
In de Tarpen 42, D-22848 Norderstedt

Service Hotline +49 40 270750270

Return Service: Rollei Service Deutschland
Denisstraße 28a, D-67663 Kaiserslautern



www.rollei.de/social
www.rollei.com/social

For Asia

分銷: Rollei HK Limited
香港九龍觀塘成業街 7 號
寧晉中心 17/F D2
Tel +852 2377 9023
Fax +852 2366 8091
Email info-hk@rollei.com




www.cn.rollei.com/social

www.rollei.com

Rollei

 Actioncam 430

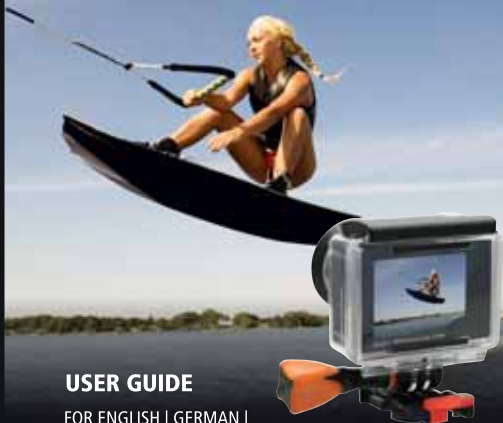


USER GUIDE

FOR ENGLISH | GERMAN |
FRENCH | SPANISH | ITALIAN | PORTUGUESE
GREEK | CZECH | CHINESE (SIMPLIFIED AND TRADITIONAL)

www.rollei.de

 THE BASICS

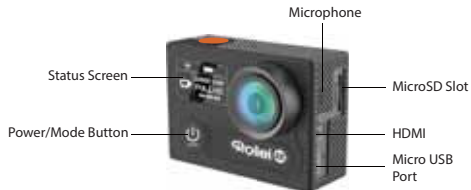

ACCESSORIES



Waterproof Housing



Camera Frame Holder



Mount Basic with 2 component screw



Protective Backdoor



USB cable



Battery



Manual



Safety Pad Flat with 3M sticker



Safety Pad Curved with 3M sticker



Adaptor



Adaptor



Quickshoe Mount

ROLLEI ACTIONCAM 430

Before using the Rollei Actioncam 430, please ensure you read and understand the safety precautions.

- Do not attempt to open the case of the camera or modify it in any way. If the camera has been opened, the warranty will be void. Maintenance and repairs can only be performed by Rollei.
 - Keep the camera away from water and other liquids (unless used in the waterproof case).
 - Do not handle the Rollei Actioncam 430 with wet hands (unless used in the waterproof case). This may cause the camera to malfunction.
- Recharge the battery using the micro USB connector.
- Any variation to voltage or current will cause the camera to fail.
 - The Rollei Actioncam 430 should not be used in heat exceeding 60 C (140F), or cold below -15C (5F).

- Do not drop the Rollei Actioncam 430.
- Avoid placing heavy objects on the Rollei Actioncam 430.
- Do not dispose of this unit in domestic waste.

GETTING STARTED

This user manual will help you learn the basics of capturing life's most incredible moments!

To power ON:


Press the **Power/Mode Button**.

To power OFF:


Press and hold the **Power/Mode Button**.

OVERVIEW


Turn the camera ON and press the Power/Mode Button repeatedly to cycle through the camera modes and settings. The modes will appear in the following order:

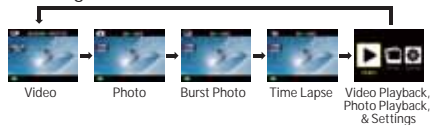


 Video Record Video

 Photo Capture a single photo.

 Burst Photo Capture photo bursts

 Time Lapse Shoot a series of photos at set time intervals

 Video & Photo playback

 Adjust camera settings, resolution and more.

SETTINGS



Press the **Shutter/Select Button** to enter the settings menu. Repeatedly press the **Power/Mode Button** to cycle through options and press the **Shutter/Select Button** to select desired option. To go back to the previous screen or exit the settings menu, press the **Wi-Fi Button**.

Video Resolution:

4k30/2k60/1080p120/1080p60/1080p30/720p200

MicroSD Card	4k30/2k60	1080p60	1080p120/720p200
32 GB	80 mins	120 mins	60 mins
64 GB	160 mins	240 mins	120 mins

Snow Mode: On/Off

Photo Resolution: 12M/8M

Video Interval: 1 Min/ 5 Min

Looping Video: Off/On (4K & 2K not supported)

Time Stamp: Off/Date/Date & Time

Exposure: +-2.0/+-.1.7/+-.1.3/+-.1.0/+-.0.7/+-.0.3/0

Burst Mode: 3 Photos/ 1S, 7 Photos/ 2S, 15 Photos/ 4S, 30 Photos/ 8S

Time Lapse Interval: 3s/5s/10s/30s/60s

Time Lapse: Off/On

Power Frequency: 50Hz/60Hz/Auto

Language: English/Chinese/Traditional Chinese/
Italian/Spanish/Portuguese/German/Dutch/
French/Czech/Danish/Swedish/Norwegian/
Slovakia/Greece/Finnish/Hungarian

Date & Time: MM/DD/YY, DD/MM/YY,
or YY/MM/DD

Sound Indicator: Shutter On/Off, Start Up
1/2/3/None, Beep On/Off, Volume 0/1/2/3

Screen Saver: Off/1 min/3 min/5 min

Power Saver: Off/1 min/3 min/5 min

Format: No/Yes

Reset: No/Yes

Version

VIDEO MODE

Video

To record Video, verify the camera is in **Video** mode. If the **Video** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

To start recording:

Press the **Shutter/Select Button**. The camera will emit one beep and start recording.

To stop recording:

Press the **Shutter/Select Button**. The Camera emits one beep to indicate recording has stopped. This camera automatically stops recording when the battery is out of power. Your **Video** will be saved before the camera powers **OFF**.

PHOTO MODE

Photo

To capture a **Photo**, verify the camera is in **Photo** mode. If the **Photo** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

To take a photo:

Press the **Shutter/Select Button**. The camera will emit the camera shutter sound.

BURST PHOTO MODE

Burst Photo

To capture a **Burst Photo** series, verify the camera is in **Burst Photo** mode. If the **Burst Photo** icon on your camera's LCD screen is not shown, press the **Power/Mode Button** repeatedly until it appears. In **Burst Photo mode**, your camera takes 3 photos/1 sec, 7 photos/2 sec, 15 photos/4 sec, or 30 photos/8 sec.

To take a Burst Photo series:

Press the **Shutter/Select Button**. The camera will emit camera shutter sounds.

TIME LAPSE MODE

Time Lapse

To capture a **Time Lapse** series, verify the **Time Lapse** is **ON** and camera is in **Time Lapse** mode. If the **Time Lapse** icon on your camera's LCD screen is not shown, press the **Power/Mode Button** repeatedly until it appears. In **Time Lapse** mode, your camera captures a series of photos at **3,5,10,20,30** or **60** second intervals.

To take Time Lapse:

Press the **Shutter/Select Button**. The camera initiates a countdown and emits the camera shutter sound each time a **Photo** is taken.

PLAYBACK

Playing Back Videos and Photos

To enter the **Playback** menu:

- 1.Press the **Power/Mode Button** to select **Video** or **Photo**.
- 2.Press the **Shutter/Select Button** to enter the **Playback** menu.

- 3.Use **Power/Mode Button** to cycle through the various options.
- 4.Press the **Shutter/Select Button**.
- 5.To return to the **Playback** menu, press the **Wi-Fi Button**.

BATTERY

To charge the battery

For charging the battery, we recommend to use an USB charger with 1.5A charging current.

*Charging Time: 3 hours.

*You can NOT record or take photos while charging the camera.

2.4G Remote



Photo Button

Video Button

*Splashproof
Remote Distance: 8m/26ft

Video

To record **Video**, verify the camera is in **Video** mode.

To start recording:

Press the **Video Button**. The camera will emit one beep and the **Camera Light** will flash while recording.

To stop recording:

Press the **Video Button** again. The camera will emit one beep and the **Camera Light** will stop flashing while recording.

Photo

To capture a **Photo**, verify the camera is in **Photo** mode.

To take a photo:

Press the **Photo Button**. The camera will emit a camera shutter sound.

Burst Photo

To capture a **Burst Photo** series, verify the camera is in **Burst Photo** mode.

To take a **Burst Photo** series:

Press the **Photo Button**. The camera will emit camera shutter sounds.

Time Lapse

To capture a **Time Lapse** series, verify the Continuous Lapse is **ON** and camera is in **Time Lapse** mode.

To take **Time Lapse**:

Press the **Photo Button**. The camera initiates countdown and emits a camera shutter sound each time a **Photo** is taken.

*To power **OFF** camera:

Press and hold the **Photo Button**.

CAMERA APP

Connecting to the Rollei 430 App

Rollei 430 App video formats:

4K30/2K50/1080p100/1080p60/720p120

(The **Rollei 430 App** does **NOT** support 2K60/1080p120/720p200 formats of your camera.

Therefore, you can't see these formats on the app.)

The **Rollei 430 App** lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of select content and more.

1. Download the **Rollei 430 App** to your smartphone or tablet at the **Google Play** or **Apple App Store**.
2. Press the **Power/Mode Button** to power camera **ON**.
3. Make sure the camera is in **Camera modes**.
4. Press the **Wi-Fi Button** to turn on **Wi-Fi***.
5. In your smartphone or tablet's Wi-Fi settings, connect to the network called "**Rollei430**" followed by a series of numbers.
6. Open the **Rollei 430 App** on your smartphone or tablet.

* Press and hold the **Wi-Fi Button** for three seconds to turn **OFF Wi-Fi**.

The **Rollei 430 App** is compatible with smartphones and tablets listed below.

For Apple iOS

* iPhone6 (Plus) & 6s (Plus) (iOS9)

* iPad Air & Mini (iOS9)

For Android:

* Android 4X Quad-core devices

COMPATIBILITY

* Compatibility varies by device. Content playback, sharing and access to the camera's memory card might be not available on some devices.

SET THE DATE/TIME

Your camera's date and time are automatically set when you connect your camera to the Rollei 430 App. If the battery is removed from the camera, you must reset the date and time (automatically or manually).

STORAGE/MICROSD CARDS

This camera is compatible with **32GB** and **64GB** capacity **microSDXC** memory cards. Be sure to use a **microSDXC** card with at least a **U3 (90MB/s)** speed rating and format your card using the camera before first use.

MICROSD CARD CONSIDERATIONS

We strongly recommend only purchasing name brand cards through official resellers. The cards below are known to work well with this camera.

Sandisk Extreme microSDXC U3 64GB

Sandisk Extreme microSDHC U3 32GB

Sandisk Extreme PRO microSDXC U3 64GB

Sandisk Extreme PRO microSDHC U3 32GB

Transcend Ultimate 633x microSDXC U3 64GB

Transcend Ultimate 633x microSDHC U3 32GB

Samsung Pro microSDXC U3 64GB

Samsung Pro+ microSDXC U3 64GB

Note: You will find the manual in the following languages online on www.rollei.com:
German/English/French/Italian/Spanish/Portuguese/Finnish/Danish/
Swedish/Norwegian/Czech/Hungarian/
Dutch/Slovakia/Greek

Disposal



Dispose of packaging: For disposal, separate packaging into different types. Cardboard and board must be disposed of as paper and foil must be recycled.



Disposal of Waste Electrical and Electronic Equipment and/or Battery by users in private households in the European Union.

This symbol on the product or on the packaging indicates that this cannot be disposed of as a household waste. You must dispose of your waste equipment and battery by handing it over to the applicable take-back scheme for the recycling of electrical and electronic equipment and battery. For more information about recycling of this equipment and battery, please contact your city office, the shop where you purchased the equipment or your household waste disposal service. The recycling of materials will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and environment.

Battery warning

Never dismantle, crush, or pierce the battery, or allow the battery to short-circuit. Do not expose battery being placed in high temperature environment, if battery leaks or bulges, stop continue to use. Always charge using the charger. Risk of explosion if battery is replaced by an incorrect type. Keep the battery out of reach of children. Batteries may explode if exposed to naked fire. Never dispose of batteries in a fire. Dispose of used batteries observing local regulations. Before disposing the device, please remove the battery.

Conformity

The Manufacturer hereby declares that the CE marking was applied to the Rollei Actioncam 430 in accordance with the basic requirements and other relevant provisions of the following CE Directives:

2011/65/EC RoHS Directive
2004/108/EG EMC Directive
2002/96/EG WEEE Directive

The EC Declaration of Conformity can be requested from the address specified on the Warranty card.

