

Canon | Auslösekabel C1



EOS R, EOS RP, EOS R6, EOS 200D, EOS 300D, EOS 350D, EOS 400D, EOS 450D, EOS 500D, EOS 550D, EOS 60D, EOS 60Da, EOS 600D, EOS 650D, EOS 70D, EOS 77D, EOS 700D, EOS 750D, EOS 760D, EOS 80D, EOS 800D, EOS 100D, EOS 1000D, EOS 1100D, EOS 1200D, EOS 1300D G3X, EOS 200D, SX60 HS, SX50 HS, Powershot G1 x, G1X II, G3 x, G5X II, G10, G11, G12, G15, G16, SX50 HS, EOS M5, EOS M6

Canon | Auslösekabel C2



EOS R5, EOS 1D, EOS 1Dc, EOS 1D MK II, EOS 1D MK II n, EOS 1D MK III, EOS 1D MK IV, EOS 1Ds, EOS 1Ds MK II, EOS 1Ds MK III, EOS 1Dx, EOS 1Dx MK II, EOS 1V, EOS 10D, EOS 20D, EOS 20Da, EOS 3, EOS 30D, EOS D30, EOS 40D, EOS 5D, EOS 5D MK II, EOS 5Dsr, EOS 5Ds, EOS 5D MK III, EOS 5D MK IV, EOS 50D, EOS 6D, EOS 6D MK II, EOS D60, EOS D60, EOS 7D, EOS 7D MK II

Fuji | Auslösekabel C1F



X-Pro3, X-E1, X-E2, X-E3, X-E4, X-T2, X-T3, X-T4, X-T10, X-T20, X-T30, X-T100, X-T200, T-T10, X-H1, X-A5, X-A7, X-A10, X100T, X70, XF10, GFS 50S, GFX 50R, GFX 50S, GFX 100, GFX 100S

Fujifilm | Auslösekabel F1



S1, X-100T, X100F, X-30, X-A1, X-A10, X-A2, X-A20, X-A3, X-A5, X-E2s, X-H1, X-M1, X-Pro2, X-Q1, X-Q2, X-T1, X-T10, X-T2, X-T20, XF-10

Fujifilm | Auslösekabel F2



FinePix HS20EXR, HS22EXR, HS25EXR, HS28EXR, HS30EXR, HS33EXR, HS35EXR, S100Fs, S20, S205EXR, S9000, S9100, S9500, S9600, X-E1, X-S1

Nikon | Auslösekabel N1



D1, D1H, D1x, D100 (mit MB-D100), D2, D2X, D2Xs, D2H, D2Hs, D200, D3, D3X, D3S, D300, D300s, D4, D4s, D5, D500, D6, D700, D800, D800e, D810, D810a, D810e, D850, F5, F6, F90, F100, Z9

Nikon | Auslösekabel N2



Coolpix A, P1000, P7700, P7800, DF, D3100, D3200, D3300, D3500, D5000, D5100, D5200, D5300, D5500, D5600, D600, D610, D750, D7000, D7100, D7200, D7500, D90, Z5, Z6, Z6 II, Z7, Z7 II

Olympus | Auslösekabel O2



E-30, E400, E410, E-420, E-450, E-510, E-520, E-620, OM-D E-M1, OM-D E-M10, OM-D E-M10 MK II, OM-D E-M5, OM-D E-M5 MK II, PEN E-P1, E-PM1, E-P2, E-P2 SE, E-PM2, E-PL2, E-P3, E-PL3, E-P5, E-PL6, F, SP-510 UZ, SP-550, SP-550 UZ, SP-560, SP-560UZ, SP-565 UZ, SP-570, SP-570 UZ, SP-590 UZ, SP -810 UZ, Stylus 1, 1S, SH-2, SZ-11, SZ-20, SZ-30 MR, XZ-1, XZ-2 iHS

Panasonic | Auslösekabel P1



Digilux 2, Digilux 3, FT 2, DMC-FZ15, FZ100, FZ1000, FZ1000 II, FZ150, FZ20, FZ20K, FZ200, FZ2000, FZ30, FZ330, FZ50K, G1, G10, G2, G3, G5, G6, G70, G80, G81, G85, G9, G90, G95, G99, GF1, GH1, GH2, GH3, GH4, GH 5, GH 5s, GX1, GX7, GX8, L1, L10, LC-1, S1H, S1R, S5, TS-2

Sony | Auslösekabel S1



Alpha 100, 200, 33, 35, 37, 300, 350, 3000, 400, 450, 55, 57, 500, 550, 550v, 560, 580, 65, 65v, 68, 77, 77v, 77 II, 700, 850, 99, 99 II, 900

Sony | Auslösekabel S2



Alpha 1, 3000, 3500, 58, 5000, 5100, 68, 6000, 6100, 6300, 6400, 6500, 6600, 7, 7 II, 7 III, 7r, 7r II, 7r III, 7s, 7s II, 7s III, 77 II, 9, 9 II, 99 II, HX300, HX400V, HX50V, HX60V, HX80, HX90, HX90V, NEX-3N, NEX-3NL, RX0, RX10, RX10 II, RX10 III, RX10 IV, RX100 Platinum, RX100, RX100 II, RX100 III, RX100 IV, RX100 V, RX100VI