



Canon Auslösekabel N3	
R5	10D
7D	1D
7D II	1D X
6D	1D X Mark II
6D II	1D X Mark III
5D	1D X Mark IV
5D II	EOS-1V
5D III	
5D IV	
5DS	
50D	
40D	
30D	
20D	



Nikon Auslösekabel DC2	
D750	D3200
D780	D3100
D7200	D90
D7100	DF
D7000	P7700
D610	Z5
D600	Z6
D5600	Z6 II
D5500	Z7
D5300	Z7 II
D5200	
D5100	
D5000	
D3300	



Sony Auslösekabel S2	
A7	A6400
A7 II	A6300
A7 III	A6000
A7S	A5100
A7S II	A5000
A7S III	A3000
A7R	HX300
A7R II	HX400
A7R III	HX50
A7R IV	HX60
A9	RX100 II
A9 II	RX100 III
A6600	A58
A6500	NEX-3NL



Fujifilm Auslösekabel E2	
X-T1	X-T200
X-E3	X-T100
X-E2	X70
X-E2S	X30
X-A10	X100F
X-A7	X100T
X-A3	FINEPIX S1
X-A2	X-PRO3
X-A1	X-PRO2
X-M1	GFX50S
XQ2	
XQ1	
X-T20	
X-T10	



Panasonic Auslösekabel L1		
DMC-FZ50	L10	GH2
DMC-FZ50K	LC1	GH1
DMC-FZ50S	G10	GX1
DMC-FZ30	G9	G5
DMC-FZ150	G9L	GX8
DMC-FZ30K	G95	GX7
DMC-FZ30S	G85	
DMC-FZ20	G3	
DMC-FZ20K	G2	
DMC-FZ20S	G1	
DMC-FZ200	GF1	
DMC-FZ100	GH5	
FZ1000	GH4	
L1	GH3	



Leica Auslösekabel L1	
DIGILUX2	
DIGILUX3	