

Accessories In Package

○ 8inch Digital Photo Frame	1
○ Stand Of Digital Photo Frame	1
○ Remote Control	1
○ Button Battery(CR2025 3V) In Remote Control	1
○ AC Adapter	1
○ User Manual(This Paper)	1

Safety Precautions

Precautions and maintenance

- For indoor use only.
- Do not expose the unit to moisture or condensation to avoid the risk of fire or electric shock.
- Do not block the ventilation holes on the rear of the digital photo frame to avoid overheating.
- Keep the digital photo frame out of direct sunlight.
- Do not disassemble the digital photo frame. Disassembling the digital photo frame will void your warranty.

Cleaning the LCD screen

- Treat the screen carefully. The screen of the digital photo frame is made of glass and it can easily break or be scratched.
- If fingerprints or dust accumulate on the LCD screen, we recommend using a soft cloth, such as used for camera lenses, to clean the screen.
- Moisten the cleaning cloth with the cleaning solution; do not apply cleaning agent directly on the screen.

Warning

 
Switch the unit off before inserting or removing a memory card or USB device. Failure to do so may cause damage to the memory card, USB device and the unit.

Note: this device is for private use only and not designed for commercial use.

 
Features

1. Supports picture formats: JPEG / BMP / TIFF / PNG / GIF
2. Supports audio formats: MP3 / WMA / WMV
3. Supports video formats: Mpeg(1 · 2 · 4) / Motion-Jpeg
4. Supports memory cards: SD / MMC
5. USB connection: mini USB, USB 2.0
6. Supports PC connection
7. Auto slide-show when inserting memory card or USB drive
8. Picture & music: slide-show pictures with background music
9. Supports viewing pictures in thumbnail mode
10. Picture display mode: slide-show, preview, zoom, rotate
11. Adjustable slide-show speed and more than 10 transition modes
12. Built-in clock and calendar with slide-show window, scheduled auto on/off
13. Adjustable brightness, contrast, saturation
14. Built-in stereo speakers (2 x 1w) and earphone jack
15. OSD language: English, German and others

Product Overview

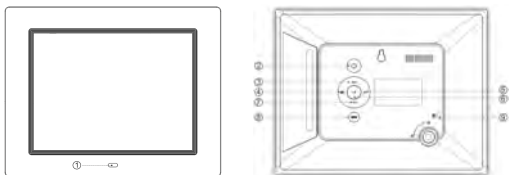



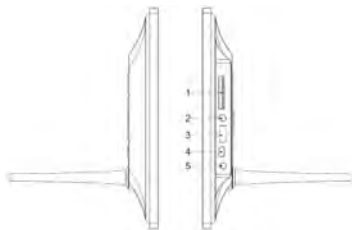











- ①RECEIVING WINDOW OF REMOTE CONTROL
- ②POWER ON/OFF
- ③NEXT
- ④VOL +
- ⑤VOL -
- ⑥PLAY/PAUSE
- ⑦PREV
- ⑧MENU
- ⑨LOCK



 
- 1.SD/MMC CARD SLOT
- 2.EARPHONE JACK
- 3.USB PORT
- 4.MINI-USB PORT
- 5.DC IN

Remote Control

 

-  : Power unit on/off.
-  : Play photo slideshow with background music.
-  : Mute sound temporarily.
-  : Play photo slideshow.
-  : Play music.
-  : Play video.
-  : Pause or continue playing media.
-  : Return to the previous menu.
-  : ▼▲◀▶: Move cursor up/down/left/right. OK: Confirm selection or toggle pause/play function in playback mode.
-  : Enter setup menu.
-  : Display date and time.
-  : Turn volume up/down.
-  : Enlarge image in photo playback mode.
-  : Clockwise 90° in photo playback mode.
-  : Move back to previous file in playback mode/Move forward to next file in playback mode.

 Installing & Replacing The Battery

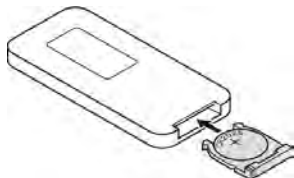

Hold the remote control upside down, press the ridged area of the battery cover and pull towards you to remove the tray. Place one cr2025 lithium button-cell battery in the tray with the positive "+" side facing you. Reinsert the tray.

 
Getting Started

1. Place the digital photo frame with installed stand on a flat surface. Connect the power adapter to a standard electrical outlet and DC in on the left side of the unit.
2. Remove the plastic battery insulator from the battery compartment and make sure the remote control has a battery inserted. Refer to "installing & replacing the battery" if a new battery is needed.
3. The unit will start up automatically when powered on. Press power at the rear of the unit or on the remote control to switch the unit on or off.

Main Screen(Memory Card and USB Device)

SD/MMC cards and USB 2.0 devices are supported.


After inserting a memory card or USB device, press [RETURN] until main screen as below appears. Press ◀ or ▶ to select memory device.

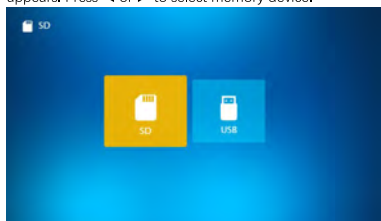

If supported photo, music and video files are stored in the memory card or USB drive, the slide show will start automatically with background music, or you can switch this function off in Setting menu.

Note: when multiple memory cards are inserted at same time, the files in USB drive will be played first.

 Operating Instructions

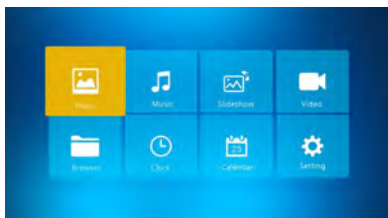



Press [OK] to access the menus, Photo, Music, Slideshow, Video, Browser, Clock, Calendar or Setting.

Photo	Picture thumbnail mode
Music	Music list
Slideshow	Play picture and music
Video	Video list
Browser	File folders in memory device
Clock	Clock mode
Calendar	Calendar mode
Setting	Setting menu of digital photo frame


Photo Mode






Select [Photo] and press [OK] or press [PHOTO] on remote control to start picture thumbnail mode or the slideshow.

 1. Press , then clockwise 90° in photo playback mode.
2. Press , then enlarge image in photo playback mode (5 phases).
3. Press [RETURN] to enter the 12-picture thumbnail mode and select the photo for full screen display with ▼▲▶◀.

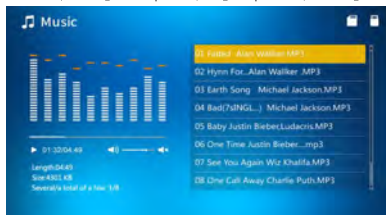
Music Mode

Select [Music] and press [OK] or press [MUSIC] on remote control to enter.





 1. Press ▲▼ to select the music in the playlist.
2. Press  to start or pause playback. Adjust the volume by pressing  . In music playback mode press ◀▶ to fast forward and rewind. Press   to play the previous or next music.

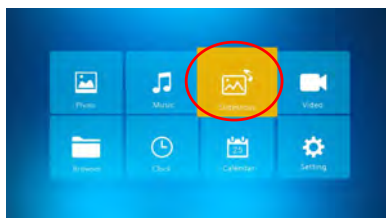Slideshow (Picture + Music)









Select [Slideshow] and press [OK] or press [BGM] on remote control to enter.

Press  to pause music slideshow and only show pictures. Press  again, then the music slideshow play.

Note: if press [RETURN], slideshow is finished and turn to picture thumbnail mode.

Video Mode

 
Select [Video] and press [OK] or press [VIDEO] on remote control to enter.

1. Press ▲▼ to select the video in the playlist, then press [OK] to start playback in full screen.
2. In video playback mode, press  to pause, press  button again to continue playing.
3. Adjust the volume by pressing  .
4. In video playback mode, press ◀▶ for fast forward and rewind. Press   to play the previous or next video.

Note: if press [RETURN], turn to video playlist menu.

File

Select [Browser] and press [OK] to enter. Browse all files in your selected storage device. Press ▲▼ to select the file and press [OK] to confirm.

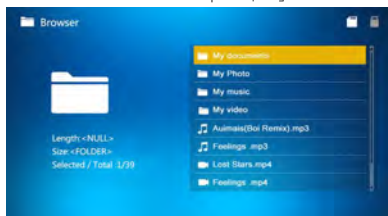

Clock

Select [Clock] and press [OK] to enter. Press [OK] to select from 6 clock styles.

 


Calendar

Select [Calendar] and press [OK] or press [CALENDAR] on remote control to enter. Press [OK] to select from 2 calendar styles.

Setting

Select [Setting] and press [OK] to enter. Press ▲▼ to highlight the menu item.

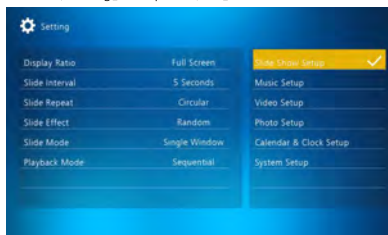

1. Press [OK] to enter the sub menu.
2. Press ◀▶ to change the value and press ▲▼ to confirm.

Note: after setting a menu item and accessing the next item, the set value will automatically be saved.

Slideshow Setup	Display Ratio	Select from full screen/original/scaled
	Slide Interval	Select from 3 seconds/5 seconds/15 seconds/30 seconds/1 minute/5 minutes/15 minutes/30 minutes/1 hour

	Slide Repeat	Select from acyclic/circular
	Slide Effect	Select from random/fly in/chessboard/cut/erase/ louver/random line/reverse/cube/rotate/off
	Slide Mode	Select from single window/two windows/triple windows/four windows
	Playback Mode	Select from sequential/random
Music Setup	Play Mode	Select from all repeat/random/random & repeat/sequential/single repeat
Video Setup	Playback Mode	Select from all repeat/random/random & repeat/sequential/single repeat
	Display Ratio	Select from full screen/original/scaled
Photo Setup	Display Ratio	Select from full screen/original/scaled
	Slide Interval	Select from 3 seconds/5 seconds/15 seconds/ 30 seconds/1 minute/5 minutes/15 minutes/ 30 minutes/1 hour
	Slide Repeat	Select from acyclic/circular
	Slide Effect	Select from random/fly in/chessboard/cut/erase/ louver/random line/reverse/cube/rotate/off
	Slide Mode	Select from single window/two windows/triple windows/four windows
	Playback Mode	Select from sequential/random
Calendar & Clock Setup	Date	Setup of year/month/date
	Time	Setup of time
	Calendar Mode	Select from 2 modes
	Time Format	Select from 24/12 hour format
	Alarm Status	Select from on/off
	Alarm Time	Setup of alarm time
	Alarm Repeat	Select from once/every day/work days/weekend
	Clock Mode	Select from 6 modes
System Setup	Language	Select from 8 languages
	Gray Scale	Setup of gray scale
	Brightness	Setup of brightness
	Contrast	Setup of contrast
	Auto Power Off	Select from off or auto off time
	Auto Power On	Select from off or auto on time
	Power On & Off	Select from once/every day/work days/weekend

	Start Up Mode	Select from Photo/Music/Videos/Photo & Music/Clock/Calendar/off
	Firmware Version	Show firmware version of the digital photo frame
	Reset Default Settings	Reset to default factory settings

Connecting to PC

You can connect the digital photo frame via USB cable to a PC to copy, delete or edit files.

1. Switch the Digital Photo Frame on, then connect it to your PC. Windows 2000, XP, Vista, 7, 10 and MAC OS are supported.
2. The digital photo frame will be automatically detected and the "Connection" icon is displayed. You can now copy, delete and edit files. You need to restart the Digital Photo Frame after finishing the copy, delete or edit operation.

Recycling Information



Dispose of packaging: For disposal, separate packaging into different types. Cardboard and board must be disposed of as paper and foil must be recycled.



Disposal of old devices: Applicable in the European Union and other European countries with systems for the separate collection of reusable materials. Do not dispose old devices into the household waste! If the Rollei Degas DPF-850 is no longer used, every consumer is legally obligated to dispose them separately from the household waste, for example, at a collection site of his community / city district. This ensures that devices are properly recycled and negative effects on the environment are avoided. Therefore electrical and electronic equipment needs to be marked with the shown symbol.



Conformity

The Manufacturer hereby declares that the CE marking was applied to the Rollei Degas DPF-850 in accordance with the basic requirements and other relevant provisions of the following CE Directives:

2011/65/EC RoHS Directive
2014/30/EU EMC Directive
2014/35/EU LVD Directive
2009/125/EG EuP Directive
2012/19/EC WEEE Directive



The EC Declaration of Conformity can be requested from the address specified on the Warranty card.