Remote Control for Actioncam 10s / 11s Plus

Remote Control for Operating the Actioncam 10s and 11s Plus

- Easy triggering of videos and photos at the touch of a button from up to 20 m away (depending on obstacles)
- With practical wristband

Rollei

- Can also be used for water sports: waterproof up to a depth of 2 m (shutter rekease not possible under water)
- Charging of the remote control via micro-USB cable and USB adapter (both not included in the scope of delivery)



Technical Data	
Length of wrist band	26 cm
Reach	20 m (without obstacles)
Frequency band	2.412 - 2.472 GHz
Max. transmission power	10 dBm
Connections	Micro USB
Water density	Up to a depth of 2 m
Power supply	Li-Ionen-Akku 3,7 V / 150 mAh / 0,555 Wh
Input	DC 5 V / 1 A
Dimensions (L x W x H) Weight	27 x 3 x 1.2 cm 32 g
What's in the Box and Packaging Details	
What's in the box	1 x remote control for actioncam 10s und 11s Plus
Packaging dimensions (L x W x H) Weight	15.3 x 16.6 x 5.1 cm 57 g
Specifications are subject to change without notice.	

Specifications are subject to change without notice.

