

Rollei
since 1920

QUICK START GUIDE

FOR GERMAN | ENGLISH | SPANISH | ITALIAN | FRENCH | PORTUGUESE | GREEK | DUTCH
POLISH | RUSSIAN | HUNGARIAN | TURKISH | NORWEGIAN | DANISH | FINNISH | SWEDISH



Powerflex 800



👍 gefällt mir – auf
facebook.com/rollei



👍 I like – on
facebook.com/rollei



Quick Start Guide

ENGLISH




General Guide

The numbers in parentheses indicate the pages where each item is explained.


• Camera

Front

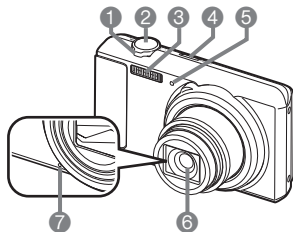


- 1 Zoom controller
- 2 Shutter button
- 3 Flash
- 4 [ON/OFF] (Power)
- 5 Front lamp
- 6 Lens
- 7 Microphone
- 8 [RECORD] (REC) button

Back

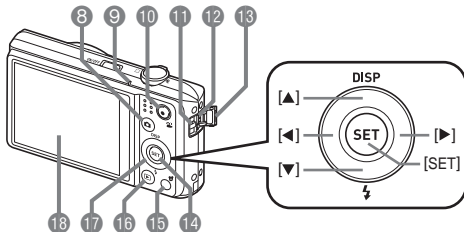

- 9 Back lamp
- 10 [MOVIE] (Movie) button
- 11 Strap hole
- 12 [USB/AV] port
- 13 Connector cover
- 14 [SET] button
- 15 [DELETE] (Delete) button
- 16 [PLAY] (PLAY) button
- 17 Control button
([▲] [▼] [◀] [▶])
- 18 Monitor screen

Bottom

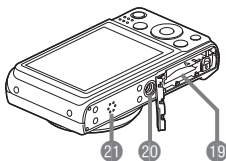

- 19 Battery/memory card slots
- 20 Tripod hole
Use this hole when attaching to a tripod.
- 21 Speaker

NOTE


- Note that the battery of a newly purchased camera is not charged. Perform the steps below to load the battery into the camera and charge it.
- Use only the provided batteries or type of battery and charger that came with your camera. Using other types of battery or charger may damage the equipment and invalidate the warranty.

Configuring Basic Settings the First Time You Turn On the Camera

The first time you load a battery into the camera, a screen appears for configuring the display language, date, and time settings. Failure to set the date and time correctly will cause the wrong date and time data to be recorded with images.

1. Press [ON/OFF] (Power) to turn on the camera.


2. Use [▲], [▼], [◀], and [▶] to select the language you want and then press [SET].

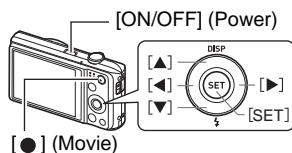

3. Use [▲] and [▼] to select a date format and then press [SET].

4. Set the date and the time.

Use [◀] and [▶] to select the setting you want to change and then use [▲] and [▼] to change it. To switch between 12-hour and 24-hour format, press [●] (Movie).

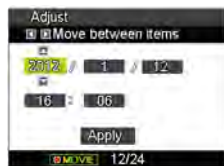

5. After setting the date and time, use [◀] and [▶] to select "Apply" and then press [SET].


Using the Control Panel

The Control Panel can be used to configure camera settings.


1. In the REC mode, press [SET].

This will select one of the Control Panel icons and display its settings.

[▲] [▼] [◀] [▶]

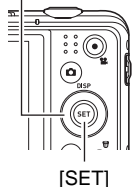

Available settings Control Panel

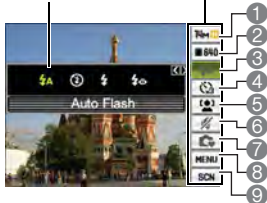

2. Use [▲] and [▼] to select the setting you want to change.

- | | |
|--------------------------------|------------------------------|
| 1 Snapshot image size/quality* | 7 Simple Mode |
| 2 Movie image quality | 8 REC menu display |
| 3 Flash | 9 Scene Mode scene selection |
| 4 Self-timer | |
| 5 Face Tracking | |
| 6 Silent Mode | |

* Snapshot image quality cannot be changed using the Control Panel.

3. Use [◀] and [▶] to change the setting.

4. If you want to configure another setting, repeat steps 2 and 3.

5. After all of the settings are the way you want, press [SET].

This will apply the settings and return to the REC mode.

If you selected "MENU", the REC menu will appear.

If you selected "SCN", the Scene Mode scene menu will appear.

- You can close the Control Panel by pressing  (Disable).

Using the Simple Mode

The Simple mode eliminates troublesome setups and simplifies snapshot recording. This mode is recommended for those who are new to digital imaging.

1. In the REC mode, press [SET].

2. Use [▲] and [▼] to select the third option from the bottom in the Control Panel (Simple Mode).

3. Use [◀] and [▶] to select “ON” and then press [SET].

This enters the Simple mode.

4. Point the camera at the subject.

If the camera detects a human face, it continually focuses on the face.

If the camera does not detect a face, it continually focuses on the center of the screen.

- The camera will focus and focus frame will turn green.
-

5. When you are ready to shoot, press the shutter button.

This records the snapshot.

To record a movie

1. Configure the quality setting for the movie.

The length of the movie you can record will depend on the quality setting you select.


2. In the REC mode, point the camera at the subject and then press [●] (Movie).

This will start recording and display **REC** on the monitor screen.

Movie recording includes monaural audio.

3. Press [●] (Movie) again to stop recording.

Movie recording also will stop automatically if memory becomes full before you press [●] (Movie).

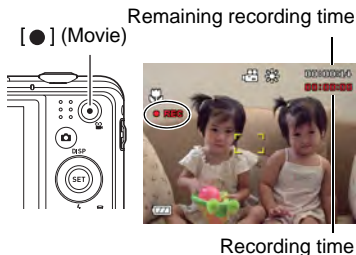


To shoot an image with Scene Mode


1. In the REC mode, press [SET].

2. Use [▲] and [▼] to select the bottom Control Panel option (SCN) and then press [SET].

This will display a menu of Scene Mode scenes.

- The initial default selection is  (Auto).

3. Use [▲], [▼], [◀], and [▶] to move the boundary to the scene you want to select.


- The scene menu has multiple pages. Use [▲] and [▼] to scroll between menu pages.
- You can access information about the currently selected scene.
- To return to normal snapshot recording, select Scene 1 .

4. Press [SET] to configure the camera with the settings for the currently selected scene.

This returns to the REC mode.

- The settings of the scene you selected remain in effect until you select a different scene.
- To select a different Scene Mode scene, repeat the above procedure from step 1.

5. Press the shutter button (if you are shooting a snapshot) or [●] (Movie) (if you are shooting a movie).

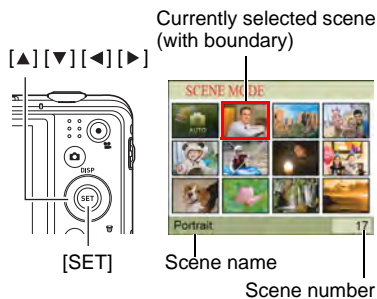

Using On-screen Menus

• Example REC Menu Screen Operation

1. In the REC mode, press [SET].
2. Use [▲] and [▼] to select the second Control Panel option from the bottom (MENU) and then press [SET].

This will display the REC menu screen.

3. Use [◀] and [▶] to select the tab where the menu item you want to configure is located.


4. Use [▲] and [▼] to select the menu item you want, and then press [▶].

5. Use [▲] and [▼] to change the setting of the selected menu item.

6. After the setting is the way you want, press [SET] to apply the setting and return to the viewfinder screen.


- Pressing [◀] instead of [SET] applies the selected setting and returns to the menu item selection.
- To configure settings on another tab after pressing [◀] to return to the menu item selection, use [▲] or [☒] (Delete) to move the highlighting up to the tabs, and then use [◀] and [▶] to select the tab you want.

[▲][▼][◀][▶]

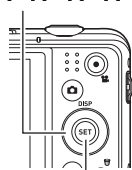

[SET]

Example:
When "Quality" is selected on the "Quality" tab

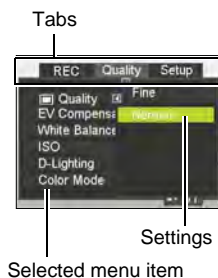

NOTE

- [☒] (Delete) provides a helpful way to navigate around tabs and menus.
 - Pressing [☒] (Delete) while a tab is selected will display the viewfinder screen.
 - Pressing [☒] (Delete) while menu item or setting is selected will "back step" in the following sequence: Settings → Menu items → Tab.


Using the PLAY Panel

Pressing [SET] in the PLAY mode will display the PLAY Panel.

• Example PLAY Panel Operation

1. In the PLAY mode, press [SET].

The PLAY Panel will appear along the right side of the monitor screen.

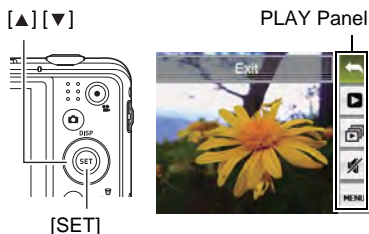

2. Use [▲] and [▼] to select the PLAY Panel item you want, and then press [SET].

3. The following describes the operations you can perform for each of the PLAY Panel items.

Exit	Exits the PLAY Panel.
Playback Start	The operation that is performed when this item is selected depends on the type of file that is currently displayed on the monitor screen.
Slideshow	Displays a slideshow menu.
Silent Mode	The Silent mode turns off camera operation sounds so you can avoid disturbing others around you when playing back images.
MENU	<p>Displays the PLAY menu. You can perform the following operations on the PLAY menu.</p> <ol style="list-style-type: none"> Use [◀] and [▶] to select the tab where the menu item you want to configure is located. Use [▲] and [▼] to select the menu item you want, and then press [▶]. Use [▲] and [▼] to change the setting of the selected menu item. Press [SET] to apply the setting.

Tabs

Selected menu item

NOTE

- Pressing [🗑] (Delete) performs one of the following operations.
 - If you previously selected a tab, pressing [🗑] (Delete) returns to the viewfinder screen.
 - If you previously selected menu item, pressing [🗑] (Delete) returns to the tab.

Rollei
since 1920

RCP-Technik GmbH & Co. KG
Tarpen 40/Gebäude 7b
D-22419 Hamburg
Hotline +49 (0)6 31/3 42 84 49
welcome@rcp-technik.com
www.rollei.com

Subject to technical changes!

