

### R6II

# 5.5" ULTRA-BRIGHT **4K 60HZ** INPUT/OUTPUT CAMERA MONITOR

#### **USER MANUAL**




### Contents

- Accessories
- Introduction
- Menu Operation Guide
- Specifications
- Warranty


### Accessories

Cold shoe Mini HDMI cable Micro HDMI cable U-Disk Microfiber cloth

#### 1. Structure

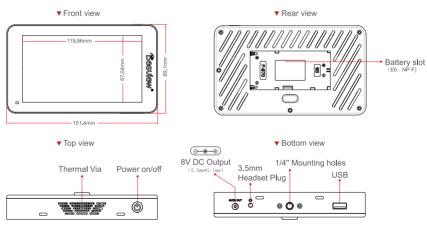


▼ Left view ▼ Right view

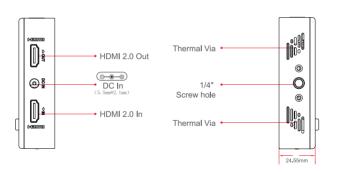

#### 2. What battery can use for R6 UHB?

The monitor supports NP-F550  $\,$  NP-F750  $\,$  NP-F970 and E6 Batteries.

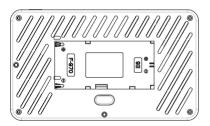





NP-F battery series

E6 battery

#### 4. Touch Screen Instruction

4.1 The monitor supports full-touch screen control



quick UI menu



Click the "MENU" to call up the menu interface

4.2 The monitor supports pinch-to-zoom function



Zoomx2 & Zoomx4



Supports drag the screen after Zoom in

4.3. How to adjust backlight and volume by touch



On the right area of the screen. swipe up to increase the volume; swipe down to volume down



On the left side of the screen. Sliding up can increase backlight brightness; Slide down to reduce backlight brightness

#### 5. How to import Lut files?

5.1 Insert the U-Disk into the monitor's U-Disk slot.




5.2 Find the 'Custom Lut\_usb" in the LUT config menu, then touch "Look USB".







5.3 Choose the LUT you need to use, when the icon shows <a> I</a> , it indicates that the LUT has been imported successfully.






5.4 After import the LUT file, touch "Exit USB", then pull out the U-Disk.



Then select "User LUTS" option in LUT setting, and to load downloaded Lut log

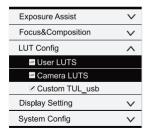




#### 6. How to upgrade the firmware?

- 6.1 Format the U disk as "FAT32 format" with a computer.
- 6.2 Copy the downloaded upgrade file into the U-Disk.
- 6.3 Insert the U-Disk into the monitor's U-Disk slot.
- 6.4 Find the "Update" in "System Config" menu, then click "OK"







Please note: Don't turn off the power or take out the U-Disk during the period of the upgrade.

6.5 The monitor will turn on automatic when the update is finished.

#### 1.Exposure Assist

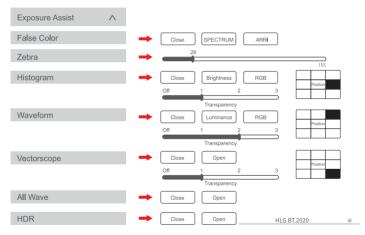


#### 2.Focus&Composition

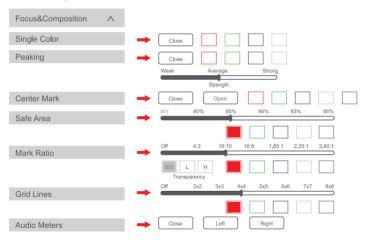


#### 3.LUT Config



#### 4 Display Setting

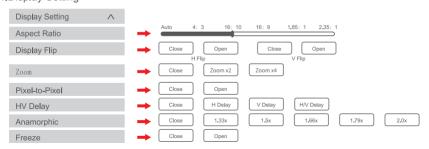

#### 5.System Config

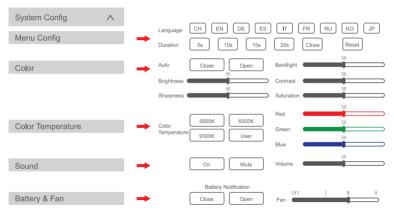



### Specifications

Screen size	5.5 inch
Machine size	151.4x89.1x24.55mm
Weight	240g
Resolution	1920x1080
Contrast	1000:1
Brightness	2800nits
Viewing angle	178°(H/V)
Backlight	LED
Materia <b>l</b>	ABS engineering plastic
Voltage	DC7-24V
Power	≤12W
Signal input	HDMJ2.0
Signal output	HDM[2.0
Audio output	3.5mm stereo headphone jack
Standby power consumption	<0.1W

#### Specifications

#### HDMI input signal format

720x480i&720x480p@59.94, 60Hz

720x576i&720x576p@50Hz 1280x720p@50, 59.94, 60Hz

1920x1080i@50, 59.94, 60Hz

1920x1080psf@24, 25, 29.97, 30Hz

1920x1080p@23.93, 24, 25, 29.97, 30,

50, 59, 94, 60Hz

3840x2160p@24, 25, 30Hz, [50, 60Hz]

4096x2160p@24Hz, 25, 29, 97, 30,

[50, 59. 54, 60Hz]

#### HDMI output signal format

720x480i&720x480p@59.94, 60Hz

720x576i&720x576p@50Hz

1280x720p@50, 59.94, 60Hz

1920x1080i@50, 59.94, 60Hz

1920x1080psf@24, 25, 29.97, 30Hz

1920x1080p@23.93, 24, 25, 29.97,30,

50, 59, 94, 60Hz

3840x2160p@24, 25, 30Hz, [50, 60Hz]

4096x2160p@24Hz, 25, 29. 97, 30,

[50, 59. 54, 60Hz]

#### Warranty

#### Conditions of Warranty Service

- 1. Free service for one year from the day of purchase if the issue is caused by manufacturing errors.
- 2. The components and maintenance service fee will be charged if the period is expired.

Free service will not be provided in the following situations (\* Even if the product is still within the warranty period)

- 1.Damage caused by abuse or misuse, dismantling, or changes to the product not made by the company.
- 2.Damage caused by a natural disaster, abnormal voltage, and environmental factors, etc.

### Warranty

	Warranty Card
User Infomation	
Name:	Phone:
Add:	
Sales Infomation	
Sale date:	
Distrbutor name:	
Distrbutor tel:	
Repair log	
Repair date:	Repair name:
Issue:	
Result: Repaired No	ot repaired Return

## Certificate

This product is strictly inspected and meets the standard and is allowed to be sold.

Examination clerk:

### FIELD MONITOR













