

The logo for Desuview, featuring a stylized red eye icon above the word "Desuview" in a black sans-serif font, followed by a registered trademark symbol (®).


Desuview®

The logo for Revo7 Plus, consisting of a large black "R" with a red horizontal bar above the top of the "7", and the word "Plus" in a white sans-serif font inside a black rounded rectangle to the right.

R7 Plus

Design for Revo7ution

Monitor usage guide

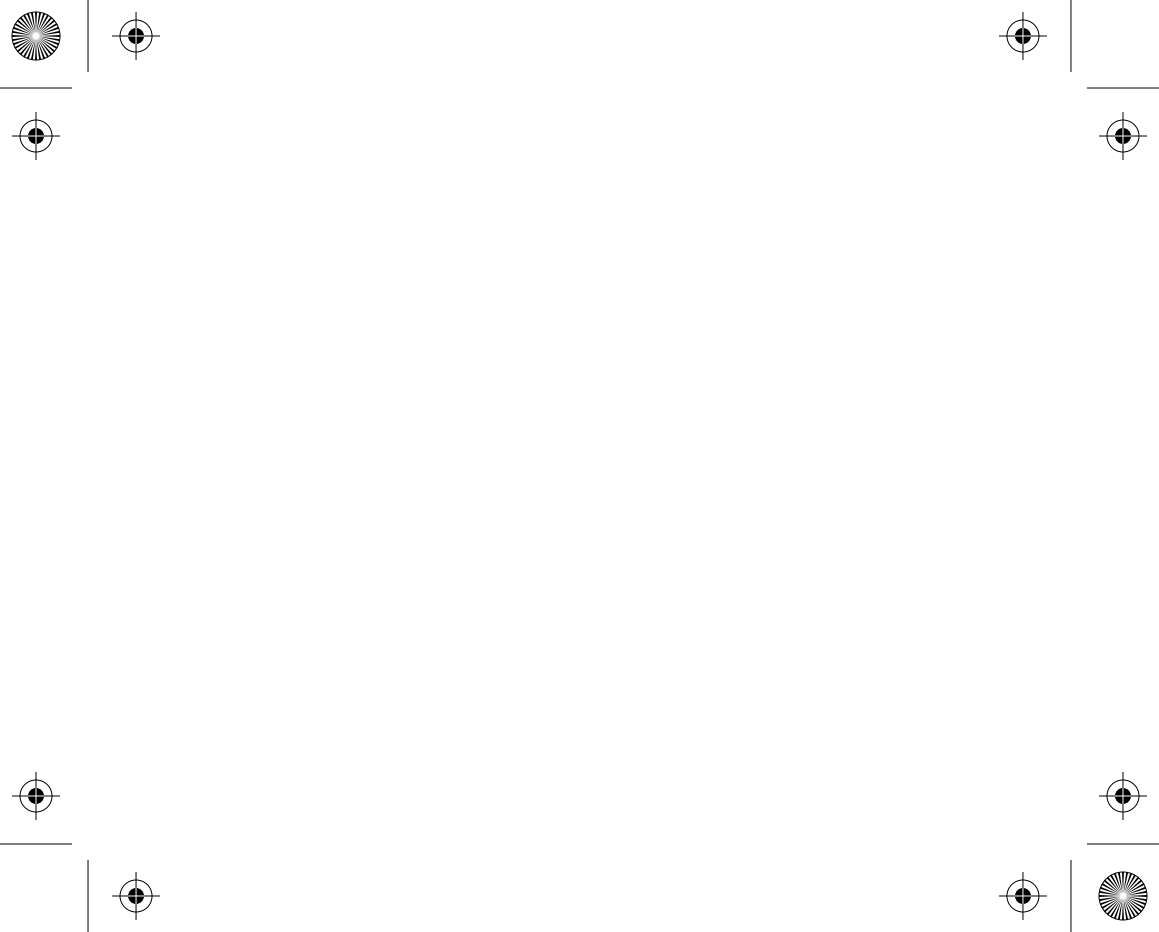











Contents


- ITEM LIST
- QUICK STARTING
- MENU OPERATION GUIDE
- CUSTOM LUT IMPORT
- UPGRADE INSTRUCTION
- MENU GUIDE
- SPECIFICATIONS
- DISPOSAL I CONFORMITY
- WARRANTY

ITEM LIST


Before using this product, please check carefully whether everything is in the package.
If there is anything missing, please contact us.

| | | | |
|--|---|--|--|
|  <p>Monitor</p> |  <p>Ballhead</p> |  <p>USB Stick</p> |  <p>HDMI micro</p> |
|  <p>HDMI Mini</p> |  <p>D-Tap</p> |  <p>Storage Bag</p> |  <p>Dust Cloth</p> |

QUICK STARTING

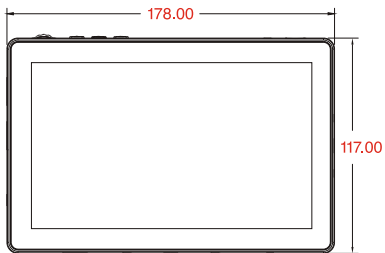


Front view

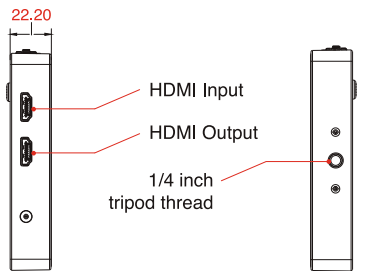


left view

right view


QUICK STARTING

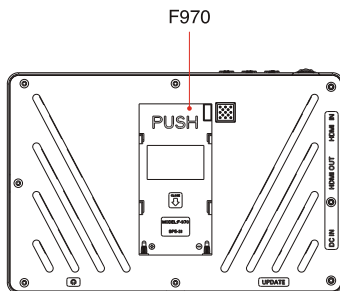

rear view

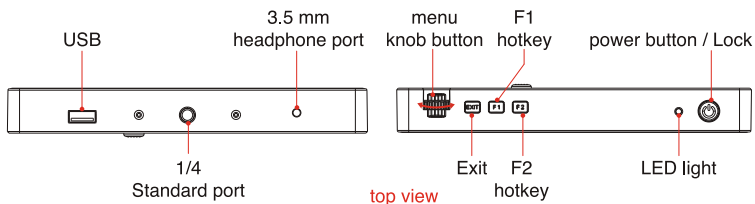


MENU OPERATING GUIDE

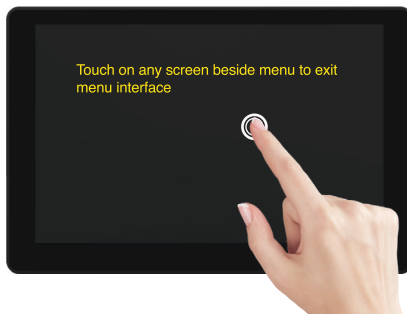


Attention: This is a capacitive touch screen monitor, all option and content in menu can be operated by touch screen or use the knob button.

CUSTOM LUT IMPORT


1. Copy the Log file into the U disk.
2. Insert the U disk into the monitor's USB interface.

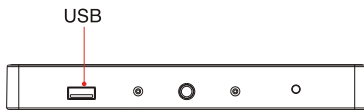


3. Find the "Custom Lut_usb" in the LUT config menu, then touch "Search USB".

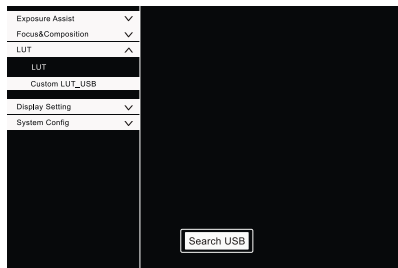


4. Open the LUT file you find.

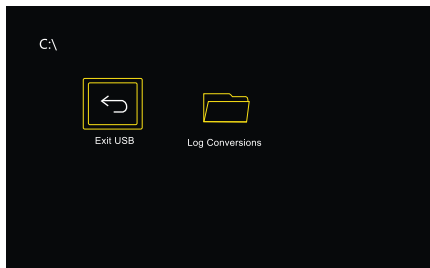

QUICK STARTING

5. Choose the LUT you need to use, when the icon shows  , it indicates that the LUT has been imported successfully.

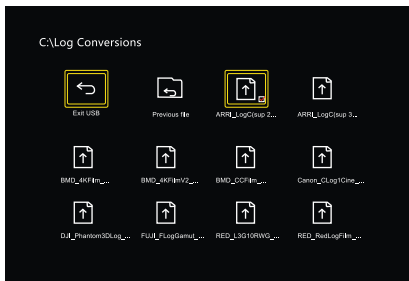


6. After import the LUT file, touch "Exit USB", then pull out the U disk.

UPGRADE INSTRUCTION


1. Copy the downloaded upgrade program into the U disk.
2. Insert the U disk into the monitor's USB interface.



3. Find the "Update" in "System config" menu, then touch "OK".

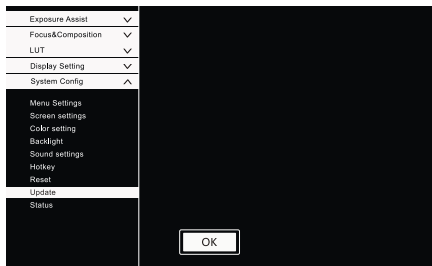

The LED light which near the power button will start flashing with red and green color.

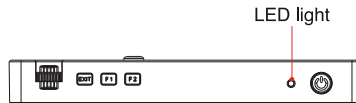

4. The monitor will turn on automatic when the update is finished.

MENU GUIDE

Exposure Assist ^

False Colour




Close

SPECTRUM

ARRI

Zebra



Histogram



Close

Brightness Histogram

RGB Histogram



Waveform



Close

Luminance Waveform

RGB Waveform



Vectorscope



Close

Open



Log/HDR

Close

HLG

PQ


MENU GUIDE

Focus & Composition ^

Single Colour




Peaking



Center Mark




Safe Area



Mark Ratio



Grid Lines



Audio Meters



MENU GUIDE

Picture Style ^

LUT

→ VLogL to Like709

Costum LUT_USB

→

Display Setting ^

Aspect Ratio

→ AUTO 4:3 16:10 16:9 1.85:1 2.35:1

Image FLIP

→

Horizontally Vertical

Zooming

→ 1.4x 2x 3x 4x 6x 8x 10x

Pixel-to-Pixel

→

HV Delay

→

Still frame

→

Battery notification

→

MENU GUIDE

System Config. ^

Menu Settings

Colour Setting

Colour Temperature

Backlight

Sound Settings

Hotkey



Reset



Update

Status


Language


→ Menu Duration


Brightness  Contrast 


Sharpness  Saturation 


→ Colour Temperature

R 

G 

B 

→ Backlight 

→ Volume 

→

Luminance Waveform RGB Waveform Brightness Histogram RGB Histogram

Vectorscope False colour Zebra Single colour

Peaking Center Mark Safe Area Mark Ratio

Grid Lines Audio Meters LUT Custom LUT_USB

Aspect Ratio Horizontally Vertically Pixel-to-Pixel

→

| Input Source | HDMI | Resolution | NO signal | Scan Mode | NO signal |
|--------------|-----------|--------------------|-----------|--------------|-----------|
| Frame | NO signal | Colour Temperature | 6500K | Aspect Ratio | Auto |
| Backlight | 20 | Volume | 50 | V 2.2 | 190314 |

SPECIFICATIONS

| | |
|---------------|------------------------------|
| Screen Size | 7 inch |
| Machine Size | 178 x 117 x 22.2 mm |
| Weight | 380 g |
| Resolution | 1920 x 1200 |
| Contrast | 1100:1 |
| Brightness | 1000 |
| Viewing Angle | 178° (H/V) |
| Backlight | LED |
| Material | ABS engineering plastic |
| Voltage | DC 7 – 24 V |
| Power | 12 W |
| Signal Input | HDMI 1.4 |
| Signal Output | HDMI 1.4 |
| Audio Output | 3.5 mm stereo headphone jack |



SPECIFICATIONS

HDMI input signal format

720x480i&720x480p@59.94, 60Hz
720x576i&720x576p@50Hz
1280x720p@50, 59.94, 60Hz
1920x1080i@50, 59.94, 60Hz
1920x1080psf@23.98, 24, 25, 29.97, 30Hz
1920x1080p@23.98, 24, 25, 29.97, 30, 50,
59.94, 60Hz
3840x2160p@24,25,30Hz
4096x2160p@24Hz

HDMI output signal format

720x480i&720x480p@59.94, 60Hz
720x576i& 720x576p@50Hz
1280x720p@50, 59.94, 60Hz
1920x1080i@50, 59.94, 60Hz
1920x1080psf@23.98,24, 25, 29.97, 30Hz
1920x1080p@23.98, 24, 25, 29.97, 30, 50,
59.94, 60Hz
3840x2160p@24,25,30Hz
4096x2160p@24Hz

DISPOSAL



Dispose of packaging: For disposal, separate packaging into different types. Cardboard and board must be disposed of as paper and foil must be recycled.



Disposal of old devices: Applicable in the European Union and other European countries with systems for the separate collection of reusable materials. Do not dispose old devices into the household waste! If the Bestview R7 P is no longer used, every consumer is legally obligated to dispose them separately from the household waste, for example, at a collection site of his community / city district. This ensures that devices are properly recycled and negative effects on the environment are avoided. Therefore electrical and electronic equipment needs to be marked with the shown symbol.

Conformit

The Rollei GmbH & Co. KG herewith declare, that this device "Bestview R7 P" complies with the following guidelines:

2011/65/EC RoHs Directive
2014/30/EU EMC Directive



The complete text of the EU Declaration of Conformity can be downloaded at the following Internet address: www.rollei.com/EGK/BestviewR7P

Rollei GmbH & Co. KG, In de Tarpen 42, 22848 Norderstedt, Germany



WARRANTY






Warranty

The statutory liability for defects exists.

The statutory warranty applies to the purchased product, except for consumables and wearing parts, which may also be worn out during the warranty period through proper use. The warranty period is two years from delivery of the goods.

You are obliged to examine the goods immediately and with due care for deviations in quality and quantity and to notify us of obvious defects within 7 days of receipt of the goods in text form (e.g. e-mail), timely dispatch is sufficient to meet the deadline. This shall also apply to hidden defects discovered at a later date. The assertion of warranty claims is excluded in the event of violation of the obligation to examine and give notice of defects.

If an error occurs and this is reported to us before the warranty expires, Rollei GmbH & Co. KG will, at its own discretion,

1. repair the fault free of charge using new or repaired spare parts;
 2. replace the product with a product of at least equal performance, either new or made from new or refurbished parts;
 3. refund the purchase price of the product.
- 
- 
- 
- 
- 



WARRANTY

Warranty Card

USER INFORMATION

Name

Phone:

Add:

SALES INFORMATION

Sale Date:

Distributor Name:

Distributor Tel:

REPAIR LOG

Repair Date:

Repair name:

Issue:

Result: repaired not repaired return



desuview[®]
R7 **Plus**
Design for **Revo7**ution

DESVIEW
FIELD MONITOR

Imported by:

Rollei
Rollei GmbH & Co. KG
In de Tarpen 42
D-22848 Norderstedt

Service Hotline
+49 40 270750277



Production:
2019/09

Qualified

