



Desview[®]

S6P

5.5 inch 4K Touch Screen 3D LUT On-Camera Monitor

USER MANUAL








Content

- PACKING LIST
- QUICK START
- FUNCTIONS
- MENU INSTRUCTIONS
- SPECIFICATIONS
- DISPOSAL AND CONFORMITY
- WARRANTY

PACKING LIST




Sunshield




Sunhood




L mount



HDMI mini



HDMI micro



D-Tap cable



U disk



OTG cable







Microfiber cloth






User Manual

QUICK START

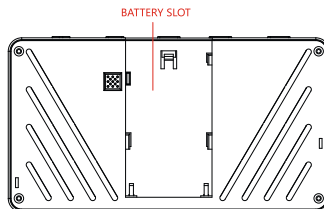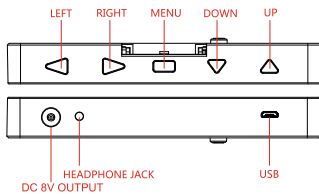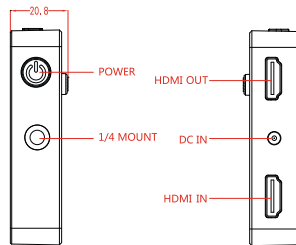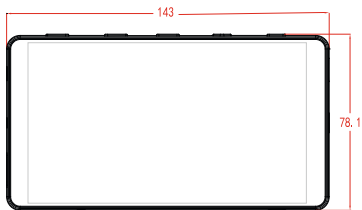


QUICK START

INSTALLATION

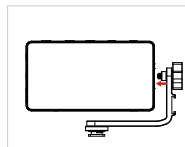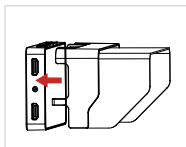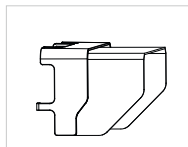

POWER

1. Monitor can use F970 series battery , also you can use D-TAP cable to connect your power system.

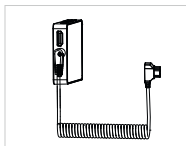

FUNCTIONS

CHECK FIELD

R, G, B, GRAY



R



G



B



GRAY



FALSE COLOR



ZEBRA



HISTOGRAM



VOLUME METER



SAFE AREA &
CENTRE MARK



MARK RATIO
MARK COLOK



PEAKING&PEAKING COLOR



PIXEL TO PIXEL



V FLIP



H FLIP



ZOOM



MENU

Exposure Assist ^

False color

Zebra

Histogram

Focus&Composition ^

Single Color

Peaking

→ Close SPECURM ARRI

→ -7 0 109
Close IRE

→ Close Brightness Histogram RGB Histogram
Close 1 2 3
Transparency

	Position	

→ Close

→ Close


Weak Average Strong
Strength

MENU

Center Mark



Safe Area



Mark Ratio



Audio Meters




LUT Config



LUT




Custom LUT_ usb



MENU

Display Setting ^

Aspect Ratio




Display Flip



Zoom




Pixel-to-Pixel



Freeze



Battery notification





System Config ^

Menu Config









MENU

Color

Brightness  0 50 100
Sharpness  0 50 100

Color Temperature

Backlight  0 50 100
Contrast  0 50 100
Saturation  0 50 100
R  0 50 100
G  0 50 100
B  0 50 100

Sound

Volume  0 50 100

Hotkey

Update

Status

Input Source HDMI | Resolution NO signal | Scan Mode NO signal
Frame NO signal | Color Temperature 6500K | Aspect Ratio Auto
Backlight 20 | Volume 50 | S6PV3.3 19112

SPECIFICATION

DISPLAY	SIZE	5.5 INCH
	RESOLUTION	1920 (W) X 1080 (H)
	DISPLAY AREA	120.96 (W) X 68.04 (H) mm
	DISPLAY RATIO	16:9
	BRIGHTNESS	450cd/m ²
	CONTRAST	1000:1
	VIEWING ANGLE	89° /89° (R/L) 89° /89° (U/D)
INPUT	SIGNAL INPUT	HDMI
POWER	POWER INPUT	DC 7-24V
	POWER	≤9W Typ
ENVIRONMENT	WORKING TEMP	0°~60°C
SIZE	SIZE	143*78.1*20.8mm
	WEIGHT	158g
HDMI		720*480i&720*480p @59.94, 60Hz 720*576i & 720*576p @50Hz 1280*720P@ 50, 59.94, 60Hz 1920*1080i @ 50, 59.94, 60Hz 1920*1080psf @ 24, 25, 29.97, 30Hz 1920*1080p@23.93, 24, 25, 29.97,30,50,59.94,60Hz 3840*2160p @ 24,25,30Hz 4096*2160P @ 24Hz

DISPOSAL



Dispose of packaging: For disposal, separate packaging into different types. Cardboard and board must be disposed of as paper and foil must be recycled.



Disposal of old devices: Applicable in the European Union and other European countries with systems for the separate collection of reusable materials. Do not dispose old devices into the household waste! If the Desview R6 Plus is no longer used, every consumer is legally obligated to dispose them separately from the household waste, for example, at a collection site of his community / city district. This ensures that devices are properly recycled and negative effects on the environment are avoided. Therefore electrical and electronic equipment needs to be marked with the shown symbol.

CONFORMITY

The Rollei GmbH & Co. KG herewith declare, that this device "Desview R6 Plus" complies with the following guidelines:

2011/65/EC RoHs Directive

2014/30/EU EMC Directive



The complete text of the EU Declaration of Conformity can be downloaded at the following

Internet address: www.rollei.com/EGK/DesviewR6Plus





Rollei GmbH & Co. KG, In de Tarpen 42, 22848 Norderstedt, Germany



WARRANTY

- The statutory liability for defects exists.
- The statutory warranty applies to the purchased product, except for consumables and wearing parts, which may also be worn out during the warranty period through proper use. The warranty period is two years from delivery of the goods.
- You are obliged to examine the goods immediately and with due care for deviations in quality and quantity and to notify us of obvious defects within 7 days of receipt of the goods in text form (e.g. e-mail), timely dispatch is sufficient to meet the deadline. This shall also apply to hidden defects discovered at a later date. The assertion of warranty claims is excluded in the event of violation of the obligation to examine and give notice of defects.

If an error occurs and this is reported to us before the warranty expires, Rollei GmbH & Co. KG will, at its own discretion,

1. repair the fault free of charge using new or repaired spare parts;
 2. replace the product with a product of at least equal performance, either new or made from new or refurbished parts;
 3. refund the purchase price of the product.
- 
- 
- 
- 
- 